

# COMPRESSORS LINE

*Light Catalogue 220-240V/50Hz*



**embraco**  
**Nidec**

[refrigerationclub.com](http://refrigerationclub.com)



# 01

## ABOUT NIDEC GLOBAL APPLIANCE



### A global partner for home and commercial appliances industries

With over 15,000 employees across 9 countries, Nidec Global Appliance manufactures and commercializes products for home and commercial applications, including refrigeration solutions, motors for washing machines, dryers and dishwashers, as well as components for heating, ventilation and air-conditioning systems (HVAC). The division is part of Nidec Corporation, a global leader in motors and components for a wide variety of industries, with headquarters in Japan.

The business division manufactures and commercializes Embraco's cooling systems and compressors for a variety of refrigeration equipment.



Your **global partner** in refrigeration since 1971



#### Home Appliances

Products for residential freezers, refrigerators and mini-fridges.

#### Commercial Appliances

Compressors and cooling solutions for commercial applications, such as bottle coolers, chest freezers, reach-ins, ice machines, medical refrigerators etc.

#### Aftermarket

Parts distribution, replacement and retail focused on retail owners, installers and contractors.

Since 1971, EMBRACO provides cooling solutions for home and commercial applications attending customers' most challenging demands. The portfolio brand has been counting on a broad, efficient and competitive portfolio for food service, food retail, merchandisers and special applications. A pioneer in fostering the early development of variable speed and the use of natural refrigerants in cooling solutions, Embraco continues to deliver innovation that exceeds the market's most challenging demands, anticipating trends.



# DIGITAL **TOOLS**



**embraco**  
toolboxapp



Available in all countries and in more than 10 languages, the Embraco Toolbox App has 7 functionalities which help refrigeration professionals on their daily routine.  
Download the App now for Android or iOS systems

## FIND INSIDE:

- CROSS-REFERENCE
- PRODUCT CATALOGUE
- DISTRIBUTOR LOCATOR
- UNIT CONVERTER
- REFRIGERANT SLIDER
- REFRIGERATION CLUB
- TROUBLESHOOTING



## PRODUCT SOFTWARE SELECTOR

**PSS**

Choose the best solution for your cooling system at Embraco's official portfolio platform. Access: [products.embraco.com](http://products.embraco.com)  
Access: [products.embraco.com](http://products.embraco.com)



## REFRIGERATION CLUB

Exclusive content for refrigeration professionals in a global channel.  
Stay up to date and join us at: [www.refrigerationclub.com](http://www.refrigerationclub.com)

**embraco**  
**Nidec**

# OUR PRODUCTS

Compressor families and their main applications:

## FIXED SPEED COMPRESSOR



**EM:** Bottle coolers, ice cream freezers, household replacement, water coolers and vending machines Up to 1/2 HP.

**EG:** Household replacement and light commercial applications. Horizontal freezers, Reach ins, Vending machines. Up to 1/3+ HP

**F:** light commercial applications. Horizontal freezers, Reach ins, Vending machines. Up to 1/2 HP

**EH:** Professional kitchens, Bottle coolers, Under counters, Professional Reach Ins. 1/2 HP to 1/4 HP.



**NE:** Frozen food islands, Professional kitchen upright Coolers and Freezers, display cases, Ultra low temperature freezers. 1/2 to 1 HP.

**NJ:** Air curtain reach ins, Ice machines, Cold rooms, blast chillers. 1 to 2 HP.

**NT:** Professional kitchens upright coolers and freezers, Air curtain reach ins, beer dispensers, Ice machines, Cold Room, Ultra low temperature freezers. 3/4 to 1 1/2 HP

## VARIABLE SPEED COMPRESSORS



**VEM:**

Refrigerators and Freezers, Wine cooler, Beverage coolers, Chest freezer, Medical cooler. Up to 1/4 Hp.



**VEG:**

Refrigerators and Freezers, Wine cooler, Beverage coolers, Chest freezer, Medical cooler. Up to 1/3+ Hp.



**VES:**

Refrigerators and Freezers, Wine cooler, Beverage coolers, Chest freezer, Medical cooler. Up to 1/3+ Hp.



**FMX:**

Refrigerators and Freezers, Wine cooler, Beverage coolers, Chest freezer, Medical cooler. Up to 1/4 Hp.



**VNE:**

Reach Ins, Medical and General Professional Kitchens. 1/2 to 1 HP.



**FMF:**

Upright reach ins, Beer dispenser, Frozen food Islands, Ultra low temperature freezers. Up to 1 Hp

**embraco**  
**Nidec**

# NOMENCLATURE

## BRAZIL LINE

EM

**EMIS70HHR**

### COMPRESSOR FAMILY EM

#### PRODUCT GENERATION

- Standard Efficiency
- I - 1<sup>a</sup> Generation
- T - 2<sup>a</sup> Generation
- U - 3<sup>a</sup> Generation
- Y - 4<sup>a</sup> Generation
- Z - 5<sup>a</sup> Generation
- X - 6<sup>a</sup> Generation

#### MECHANICAL KIT

- S - Standard mechanical kit
- Not standard

#### COMPRESSOR CAPACITY

In Btu/h - 60Hz - ASHRAE  
Checkpoint divided by 10

#### REFRIGERANT CODE

- Blends
- C - R600a
- H - R134a
- U - R290
- L - R1234yf

#### EFFICIENCY LEVEL

- N** - Standard efficiency (LBP)
- J** - Intermediate efficiency (LBP)
- E** - Efficiency improved 1<sup>a</sup> generation (LBP)
- S** - Efficiency improved 2<sup>a</sup> generation (LBP)
- H** - Standard efficiency (L/M/HBP)
- D** - Standard efficiency (HBP)
- B** - Standard efficiency (M/HBP)
- L** - Efficiency improved 2<sup>a</sup> generation (LBP)

#### ELECTRICAL COMPONENT

- |   |     |
|---|-----|
| <b>P</b> - PTC + cap. func. (optional)  | LST |
| <b>R</b> Relay                          |     |
| <b>C</b> - PTC + cap. func. (mandatory) |     |

- |   |     |
|---|-----|
| <b>X</b> - Relay + cap. part. (mandatory) | HST |
|---|-----|

F

**FFUS130HAX**

### COMPRESSOR FAMILY F/EG

#### ELECTRICAL SYSTEM F -

Relay/Overload protector  
Start capacitor (optional)

#### PRODUCT GENERATION

- Standard efficiency
- I** - Improved efficiency  
1st generation
- U** - Improved efficiency  
2nd generation (for  
commercial refrigeration)

#### STANDARD PLATFORM

#### COMPRESSOR CAPACITY

Approximate capacity in Btu/h - 60 Hz  
ASHRAE - Checkpoint divided by 10  
(for compressor FG, FFU and FFC)

#### REFRIGERANT CODE

- H - R134a
- U - R290
- L - R1234yf

#### APPLICATION

- A - L/MBP
- B - L/M/HBP

#### STARTING TORQUE

- K** - LST (Low starting torque)
- X** - HST (High starting torque)

**embraco**  
**Nidec**

# NOMENCLATURE

## BRAZIL VARIABLE SPEED LINE

VEG|T8|HB

TECNOLOGY  
VARIABLE  
SPEED  
COMPRESSORS

PRODUCT FAMILY  
VEG/VEM

**PRODUCT GENERATION**

Y - 1<sup>st</sup> Generation  
T - 2<sup>nd</sup> Generation  
Z - 3<sup>rd</sup> Generation  
X - 4<sup>th</sup> Generation  
C - 5<sup>th</sup> Generation  
D - 6<sup>th</sup> Generation

**DISPLACEMENT**  
cm<sup>3</sup>

**REFRIGERANT CODE**  
H - R134a  
C - R600a  
U - R200  
L - 1234yf

**EVAPORATION RANGE**

B - Extended evaporation range until 23 F (L/MBP)  
[] - Standard evaporation range

## CHINA LINE

EM

EMY|3|130|Z

COMPRESSOR FAMILY  
EM/EH

**PRODUCT GENERATION**  
□ - 1<sup>a</sup> Generation  
K - 2<sup>a</sup> Generation  
U - 3<sup>a</sup> Generation  
X - 4<sup>a</sup> Generation  
D - Next Generation

**APPLICATION CODE**  
1. LBP - LST  
2. LBP - HST  
3. L-MBP - LST  
4. L-MBP - HST  
5. M-HBP - LST  
6. M-HBP - HST  
9. M-HBP - HST

**CAPACITY**

The first digit is the number of zeros  
that you must attach to the last two  
digits to obtain the capacity (aprox.)  
in kcal/h in 50 Hz.  
Ex.: 144 = 440 kcal/h em 50 Hz.

**REFRIGERANT CODE**  
UR290  
ZR134a  
ER22/R422D  
GK R404A  
Y R600a

## EUROPE LINE

NE / NT / NJ

N T U 6 2 2 4 Z V

**COMPRESSOR FAMILY**  
NE / NT / NJ

**PRODUCT GENERATION**

- 1<sup>a</sup> Generation
- K - 2<sup>a</sup> Generation
- U - 3<sup>a</sup> Generation
- X - 4<sup>a</sup> Generation
- D - Next Generation

**APPLICATION CODE**

1. LBP - LST
2. LBP - HST
3. L-MBP - LST
4. L-MBP - HST
5. M-HBP - LST
6. M-HBP - HST
9. M-HBP - HST

**CAPACITY**

The first digit is the number of zeros that you must attach to the last two digits to obtain the capacity (approx.) in kcal/h in 50 Hz.

Ex.: 144 = 440 kcal/h em 50 Hz.

**REFRIGERANT CODE**

- UR290
- Z R134a
- E R22/R422D
- GK R404A
- Y R600a

**IPR VALVE - AVAILABLE FOR SOME MODELS**

Available for some models

## EUROPE VARIABLE SPEED LINE

V N E U 2 1 7 U

**TECHNOLOGY**  
VARIABLE  
SPEED  
COMPRESSORS

**COMPRESSOR FAMILY**  
VNE

**PRODUCT GENERATION**

- K - 1<sup>a</sup> Generation
- U - 2<sup>a</sup> Generation


**DISPLACEMENT**

cm<sup>3</sup>

**REFRIGERANT CODE**

- H - R134a
- C - R600a
- U - R290
- L - 1234yf

NE / NT / NJ

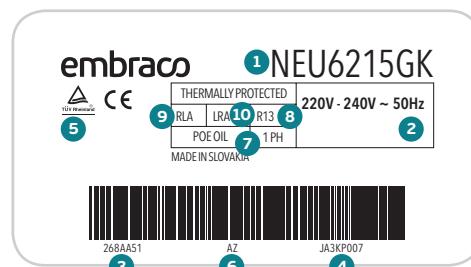

EM / EG / F / VEM / VEG / VNE



LEGENDA

- |          |                    |           |   |
|----------|--------------------|-----------|---|
| <b>1</b> | Compressor model   | <b>6</b>  | Production Date                                       |
| <b>2</b> | Voltage            | <b>7</b>  | Oil Type and Quantity                                 |
| <b>3</b> | SKU code (BOM)     | <b>8</b>  | Refrigerant Code                                      |
| <b>4</b> | Series number      | <b>9</b>  | Annual Consumption (nominal current, when applicable) |
| <b>5</b> | Institute approval | <b>10</b> | Locked Rotor current (LRA, when applicable)           |

embraco  
 Nidec

# TECHNICAL INFORMATION

## MOTOR TORQUE

LST	LOW STARTING TORQUE Compressor with <b>RSIR-RSCR-PSC electrical motor</b> for systems with capillary tube and with equalized pressures at start up.
HST	HIGH STARTING TORQUE Compressor with <b>CSIR-CSR and 3ph electrical motor</b> for systems with equalized or not equalized pressures at start up.

## APPLICATIONS

		EVAPORATION TEMPERATURE °C	APPLICATIONS
LBP	LOW BACK PRESSURE	Between -35 and -10	household Refrigerators, frozen food islands, ice cream freezers
MBP	MEDIUM BACK PRESSURE	Between -15 and 0	Displays cases, reach in coolers, bottle coolers
HBP	HIGH BACK PRESSURE	Between 0 and 15	Refrigerated wine houses, Water coolers, air dehumidifiers

## TEST CONDITIONS

TEST CONDITIONS	APPLICATIONS	EVAPORATION TEMPERATURE °C / °F	CONDENSING TEMPERATURE °C / °F	GAS RETURN TEMPERATURE °C / °F	SUBCOOLING °C	AMBIENT TEMPERATURE °C / °F
ASHRAE	LBP	-23.3 / 10	54.4 / 130	32.2 / 90	22.2	32.2 / 90
	M/HBP	7.2 / 45	54.4 / 130	35 / 95	8.3	35 / 95
ARI	LBP	-23.3 / -9.94	48.9 / 120.02	4.4 / 39.92	0	35 / 95
	MBP	-6.7 / 19.94	48.9 / 120.02	4.4 / 39.92	0	35 / 95
	HBP	7.2 / 44.96	54.4 / 129.92	18.3 / 64.94	8.3	35 / 95
EN12900	LBP	-35	40	20	40	35
	MBP	-10	45	20	45	35
	HBP	5	50	20	50	35


## COOLING TYPE

STATIC	Compressor approved for static cooling not requiring a fan motor on the condenser side.
FAN	Compressor approved for fan cooling requiring forced cooling with a fan motor on the condenser side.
STATIC/FAN (S/F)	Compressor approved for static and fan cooling which may or may not apply a fan motor on the condenser side.


**embraco**  
**Nidec**

## EXTERNAL VIEWS


DWG17 - NT SERIES

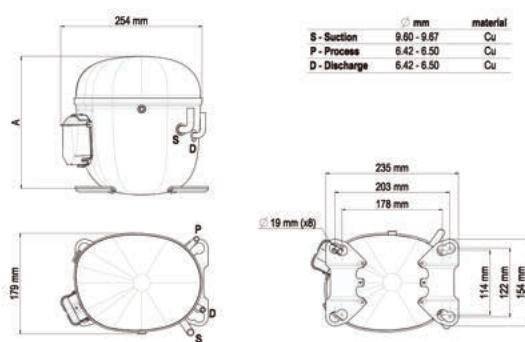


DWG22 - VES SERIES

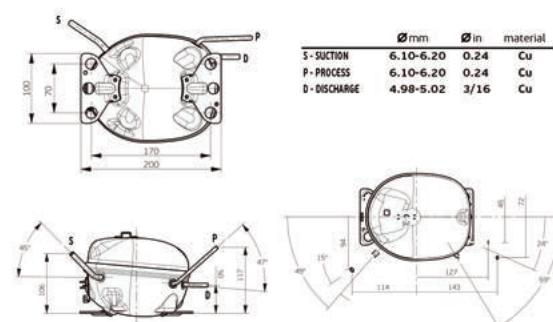


DWG19 - NTU SERIES

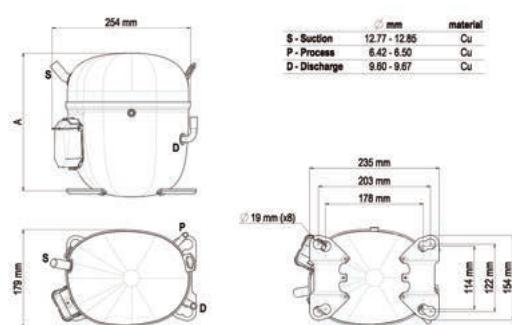


DWG23 - VEM SERIES

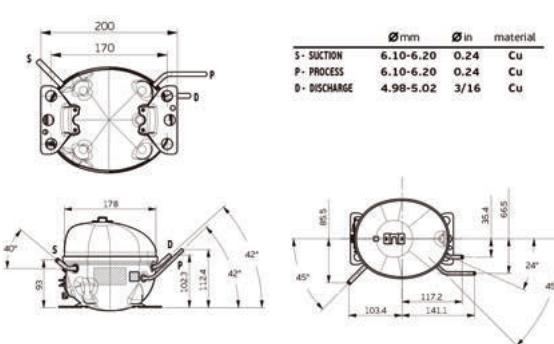

DWG01 - EM Series European Base Plate

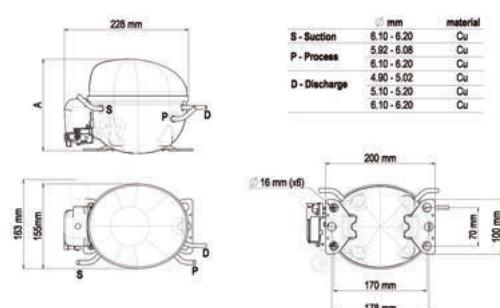


DWG - EH SERIES

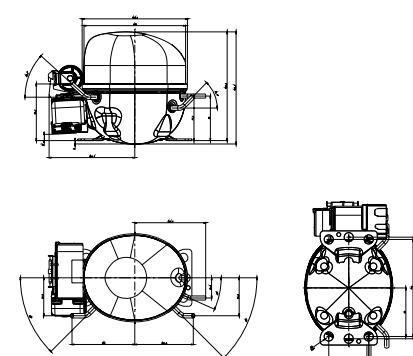


**embraco**  
**Nidec**


DWG09 - EG / F / VEG SERIES

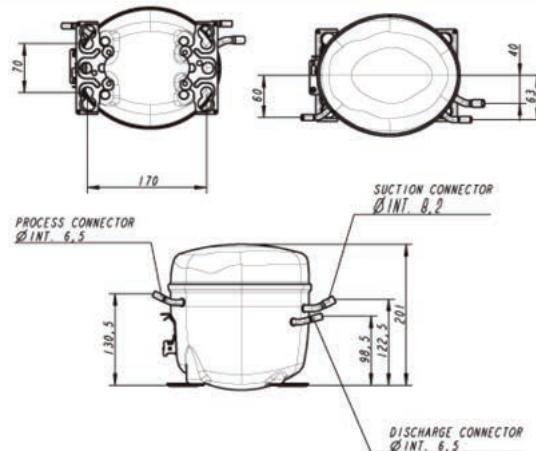


DWG15 - NT SERIES

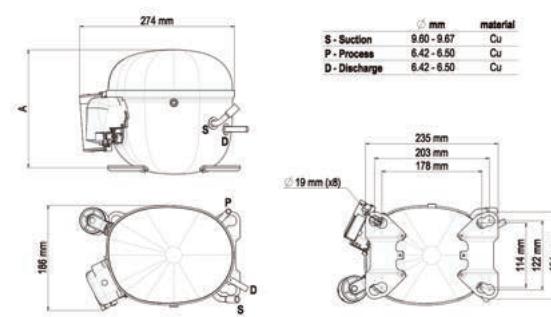


DWG04 - NE / VNE SERIES Universal Base Plate

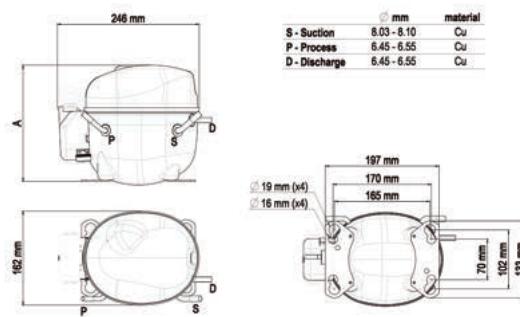


DWG10 - EM SERIES Universal Base Plate

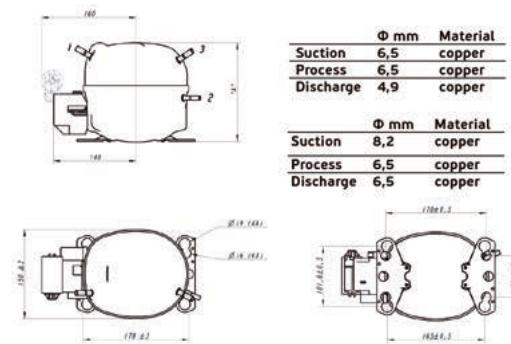

DWG14 - NJ SERIES

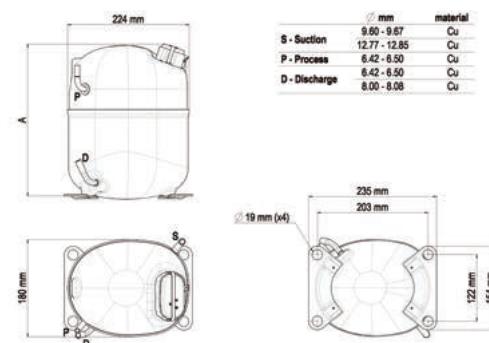

DWG16 - NT SERIES

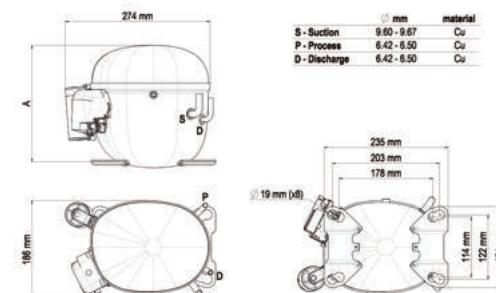

**embraco**  
**Nidec**

# COMPRESSORS CATALOGUE

## 220V 50 Hz

**embraco**  
**Nidec**

220V 50 Hz   R134a   LBP												
Model	Origin	Refrigerant	Displacement	Voltage	Envelope	Torque	Motor	LRA	Test Condition	Frequency	-40	-35
EMIS30HHR	BR	R134a	3	220-240 V 50-60 Hz 1 ~	L/M/HBP	LST	RSIR	9	ASHRAELBP32	50 Hz	27	
EMIE40HER	BR	R134a	3,4	220-240 V 50-60 Hz 1 ~	L/MBP	LST	RSIR/CSIR	8,6	ASHRAELBP32	50 Hz	39	
EM45HHR	BR	R134a	3,77	220 V 50 Hz 1 ~	L/M/HBP	LST	RSIR/CSIR	9,5	ASHRAELBP32	50 Hz	48	
EM45HNR	BR	R134a	3,77	220 V 50-60 Hz 1 ~	L/MBP	LST	RSIR/CSIR	9	ASHRAELBP32	50 Hz	41	
EMI55HER	BR	R134a	4,6	220-240 V 50 Hz 1 ~	LBP	LST	RSIR/CSIR	10,4	ASHRAELBP32	50 Hz	57	
EMT55HLC	CN	R134a	5,19	220-240 V 50 Hz 1 ~	LBP	LST	RSCR	4	ASHRAELBP32	50 Hz	69	
EMYS60HEP	BR	R134a	5,19	220-240 V 50 Hz 1 ~	LBP	LST	RSIR/RSCR	5,8	ASHRAELBP32	50 Hz	66	
EM65HNR	BR	R134a	5,54	220 V 50 Hz 1 ~	L/MBP	LST	RSIR/CSIR	12,5	ASHRAELBP32	50 Hz		
EMU70HLC	BR	R134a	5,96	220 V 50 Hz 1 ~	LBP	LST	RSCR	7,65	ASHRAELBP32	50 Hz	64	
EGAS580HLR	BR	R134a	6,36	220-240 V 50-60 Hz 1 ~	LBP	LST	RSIR/CSIR	14,5	ASHRAELBP32	50 Hz	77	
FFI7,5HAK	BR	R134a	6,76	220-240 V 50-60 Hz 1 ~	L/MBP	LST	RSIR/CSIR	14	ASHRAELBP32	50 Hz	88	
FFUS580HAK	BR	R134a	6,76	220-240 V 50-60 Hz 1 ~	L/MBP	LST	RSIR/CSIR	14,5	ASHRAELBP32	50 Hz		
FF7,5HBK	BR	R134a	6,92	220 V 50-60 Hz 1 ~	L/M/HBP	LST	RSIR/CSIR	16,7	ASHRAELBP32	50 Hz	70	
NEK2116Z	SK	R134a	7,37	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	10	ARI540	50 Hz		
FFI8,5HAK	BR	R134a	7,15	220-240 V 50-60 Hz 1 ~	L/MBP	LST	RSIR/CSIR	16	ASHRAELBP32	50 Hz	93	
EGAS90HLR	BR	R134a	7,15	220-240 V 50-60 Hz 1 ~	LBP	LST	RSIR/CSIR	14,3	ASHRAELBP32	50 Hz	95	
EGAS100HLR	BR	R134a	7,95	220-240 V 50-60 Hz 1 ~	LBP	LST	RSIR/CSIR	17,55	ASHRAELBP32	50 Hz	106	
EGZS100HLC	BR	R134a	7,95	220-240 V 50-60 Hz 1 ~	LBP	LST	RSCR	8,85	ASHRAELBP32	50 Hz	115	
FF8,5HBK	BR	R134a	7,95	220-240 V 50 Hz 1 ~	L/M/HBP	LST	RSIR/CSIR	18,2	ASHRAELBP32	50 Hz	82	
FF8,5HBK	BR	R134a	7,95	220-240 V 50-60 Hz 1 ~	L/M/HBP	LST	RSIR/CSIR	18,2	ASHRAELBP32	50 Hz	103	
FFU5100HAK	BR	R134a	7,95	220-240 V 50-60 Hz 1 ~	L/MBP	LST	RSIR/CSIR	17,55	ASHRAELBP32	50 Hz		
EMY75HLC	CN	R134a	8,35	200-230 V / 50 Hz	LBP	LST	RSCR	7,8	ASHRAELBP32	50 Hz	97	
NEK1118Z	SK	R134a	8,39	220-240 V 50 Hz 1 ~	LBP	LST	RSIR/RSCR	6,9	ASHRAELBP32	50 Hz		
FFI10HAK	BR	R134a	9,04	220-230 V 50-60 Hz 1 ~	L/MBP	LST	RSIR/CSIR	17,5	ASHRAELBP32	50 Hz	105	
NE2121Z	SK	R134a	9,26	200-220 V 50 Hz / 230 V 60 Hz 1 ~	LBP	HST	CSIR	12,6	ASHRAELBP32	50 Hz		
NE2121Z	SK	R134a	9,26	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	12,6	ASHRAELBP32	50 Hz		
EGU110HLC	BR	R134a	9,5	220-240 V 50 Hz 1 ~	LBP	LST	RSCR	9,4	ASHRAELBP32	50 Hz	121	
EGU130HLR	BR	R134a	10,61	220-240 V 50 Hz 1 ~	LBP	LST	CSIR	17,45	ASHRAELBP32	50 Hz	141	
FFU130HAX	BR	R134a	10,61	220-240 V 50 Hz 1 ~	L/MBP	LST/HST	CSIR	17,5	ASHRAELBP32	50 Hz		
EMY3130Z	CN	R134a	11,14	220-240 V 50 Hz 1 ~	L/MBP	LST	CSIR	16,04	ASHRAELBP32	50 Hz	154	
NE2130Z	SK	R134a	12,11	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	32	ASHRAELBP32	50 Hz		
FFU160HAX	BR	R134a	12,92	220-240 V 50 Hz 1 ~	L/MBP	LST/HST	CSIR	17,7	ASHRAELBP32	50 Hz		
NE2134Z	SK	R134a	14,28	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	17	ASHRAELBP32	50 Hz		
NEK2140Z	SK	R404A	16,8	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	17	ASHRAELBP32	50 Hz		

220V 50 Hz   R134a   M/HBP												
Model	Origin	Refrigerant	Displacement	Voltage	Envelope	Torque	Motor	LRA	Test Condition	Frequency	-20	-15
EM20HHR	BR	R134a	2,27	220-240 V 50-60 Hz 1 ~	L/M/HBP	LST	RSIR/CSIR	6,5	ASHRAEHP32	50 Hz	58	79
EM30HHR	BR	R134a	3	220-240 V 50-60 Hz 1 ~	L/M/HBP	LST	RSIR/CSIR	8,5	ASHRAEHP46	50 Hz	96	127
EMIS30HHR	BR	R134a	3	220 V 50-60 Hz 1 ~	L/M/HBP	LST	RSIR	8,8	ASHRAEHP32	50 Hz	95	126
EM55HHR	BR	R134a	4,6	220-240 V 50-60 Hz 1 ~	HBP	LST	RSIR	9,31	ASHRAEHP32	50 Hz		
EM65HHR	BR	R134a	5,54	220 V 50-60 Hz 1 ~	M/HBP	LST	RSIR/CSIR	14,3	ASHRAEHP32	50 Hz		
FF7,5HBK	BR	R134a	6,92	220-240 V 50-60 Hz 1 ~	L/M/HBP	LST	RSIR/CSIR	15,8	ASHRAEHP32	50 Hz	201	264
NEK6160Z	SK	R134a	7,28	220-240 V 50 Hz 1 ~	HBP	HST	CSIR	11,5	ASHRAEHP46	50 Hz		258
NEK6170Z	SK	R134a	8,39	220-240 V 50 Hz 1 ~	HBP	HST	CSIR	16,5	ASHRAEHP46	50 Hz		
EMTE6187Z	CN	R134a	9,5	220-240 V 50 Hz 1 ~	HBP	HST	CSIR	16,5	ASHRAEHP46	50 Hz		356
NEU6187Z	SK	R134a	9,99	200-240 V 50 Hz / 230 V 60 Hz 1 ~	HBP	HST	CSIR	13	ASHRAEHP46	50 Hz		380
FFI12HBK	BR	R134a	11,14	220-240 V 50 Hz 1 ~	L/M/HBP	LST	RSIR/CSIR	20	ASHRAEHP32	50 Hz	381	496
NEU6210Z	SK	R134a	12,11	220-240 V 50 Hz 1 ~	HBP	HST	CSCR	18,5	ASHRAEHP46	50 Hz		
NEU6212Z	SK	R134a	14,28	220-240 V 50 Hz 1 ~	HBP	HST	CSIR	20	ASHRAEHP46	50 Hz		
NEU6214Z	SK	R134a	16,8	220-240 V 50 Hz 1 ~	HBP	HST	CSIR	22	ASHRAEHP46	50 Hz		
NT6217Z	SK	R134a	20,44	220-240 V 50 Hz 1 ~	HBP	HST	CSCR	25	ASHRAEHP46	50 Hz		
NT6220Z	SK	R134a	22,37	200-240 V 50 Hz / 230 V 60 Hz 1 ~	HBP	HST	CSIR	29,5	ASHRAEHP46	50 Hz		
NU6226Z	SK	R134a	34,38	220-240 V 50 Hz 1 ~	HBP	HST	CSCR	31	ASHRAEHP46	50 Hz		

-30	-25	Cooling Capacity (°C ( Evaporating -23,3°C / Condensing 54,4°C Capacity (W) Efficiency (W/W)			-20	-15	-10	-5	Lubricant Oil Charge	Type/Viscosity	Expansion Device	Wiring Diagram
46	68	79	0,93	95	126	163	207	160	ESTER / ISO22	Capillary Tube	SM07	
60	85	95	1,18	116	152	194	242	180	ESTER / ISO10	Capillary Tube	SM01/SM02	
79	113	126	1,23	152	197	249	309	160	ESTER / ISO22	Capillary Tube	SM02	
64	87	97	0,97	115	150	197	257	200	ESTER / ISO22	Capillary Tube	SM01/SM02	
82	113	125	1,23	150	196	252	300	160	ESTER / ISO22	Capillary Tube	SM01/SM02	
102	138	152	1,41	180	232	294	380	180	ESTER / ISO22	Capillary Tube	SM05	
95	134	144	1,35	182	238	305	422	160	ESTER / ISO10	Capillary Tube	SM00	
108	138	152	1,15	180	235	301	379	160	ESTER / ISO22	Capillary Tube	SM01/SM02	
99	145	165	1,4	202	270	347	480	180	ESTER / ISO10	Capillary Tube	SM01	
123	175	195	1,53	235	306	390	530	230	ESTER / ISO10	Capillary Tube	SM03/SM04	
129	179	190	1,29	238	306	383	470	280	ESTER / ISO22	Capillary Tube	SM03	
134	181	185	1,29	239	310	395	496	230	ESTER / ISO10	Capillary Tube	SM08	
106	149	149	1	202	266	341	431	280	ESTER / ISO22	Capillary Tube	SM08	
127	171	0,91	180	247	328	422	340	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13		
136	188	205	1,35	249	322	407	508	280	ESTER / ISO22	Capillary Tube	SM03	
143	197	218	1,5	260	335	424	550	230	ESTER / ISO10	Capillary Tube	SM03/SM04	
162	225	250	1,52	298	383	483	608	230	ESTER / ISO10	Capillary Tube	SM04	
165	225	250	1,74	298	385	489	608	280	ESTER / ISO10	Capillary Tube	SM34	
119	168	194	1,11	230	306	398	506	280	ESTER / ISO22	Capillary Tube	SM08	
145	198	217	1,11	262	341	438	552	280	ESTER / ISO22	Capillary Tube	SM08	
167	225	249	1,45	296	382	484	608	350	ESTER / ISO10	Capillary Tube	SM08	
143	193	213	1,5	251	322	408	510	150	ESTER / ISO7	Capillary Tube	SM01	
205	227	227	1,42	271	349	439	541	350	ESTER / ISO22	Capillary Tube	SM13	
153	218	249	1,3	300	398	509	634	280	ESTER / ISO22	Capillary Tube	SM03	
229	254	1,28	304	394	499	618	634	350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13	
227	251	1,23	302	392	498	618	634	350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13	
181	249	274	1,59	329	426	545	650	230	ESTER / ISO10	Capillary Tube	SM34	
210	288	313	1,5	378	489	626	730	230	ESTER / ISO10	Capillary Tube	SM09	
201	278	309	1,38	368	475	604	761	280	ESTER / ISO10	Capillary Tube or Expansion Valve	SM08	
196	278	320	1,5	387	513	644	771	210	ESTER / ISO22	Capillary Tube	SM07	
314	346	1,33	411	526	662	817	900	350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13	
266	355	390	1,45	458	581	732	914	280	ESTER / ISO22	Capillary Tube or Expansion Valve	SM08	
329	364	1,24	433	559	707	880	950	350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13	
447	495	1,18	593	770	981	1227	1350	280	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13	

-10	-5	0	Cooling Capacity (°C 5 7,2°C / Condensing 54,4°C Capacity (W) Efficiency (W/W)			10	15	Lubricant Oil Charge	Type/Viscosity	Expansion Device	Wiring Diagram
104	135	170	212	246	251	260	315	160	ESTER / ISO22	Capillary Tube	SM02
164	206	256	312	343	2,45	377	450	160	ESTER / ISO22	Capillary Tube	SM07
163	207	259	319	363	2,6	390	471	160	ESTER / ISO22	Capillary Tube	SM01/SM02
326	399	485	529	529	2,68	584	694	160	ESTER / ISO22	Capillary Tube	SM01/SM02
304	388	484	592	645	2,39	711	842	160	ESTER / ISO22	Capillary Tube	SM07
340	429	534	657	719	2,23	798	959	280	ESTER / ISO22	Capillary Tube	SM08
329	419	527	653	721	2,44	799	959	350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13
513	644	795	875	2,35	967	967	1134	350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13
453	567	702	860	943	2,52	1045	1210	210	ESTER / ISO22	Capillary Tube or Expansion Valve	SM07
485	613	764	938	1030	2,5	1134	1210	350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13
631	790	968	1167	1316	2,61	1390	1635	280	ESTER / ISO22	Capillary Tube	SM08
734	918	1132	1246	2,57	1376	1577	1797	350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13
850	1061	1304	1432	2,31	1577	1797	2249	350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13
992	1228	1496	1638	2,16	1797	2057	2249	450	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13
1121	1385	1698	1866	2,43	2057	2249	2249	450	ESTER / ISO22	Capillary Tube or Expansion Valve	SM26
1212	1498	1843	2032	2,37	2249	2249	2249	450	ESTER / ISO22	Capillary Tube or Expansion Valve	SM26
1751	2209	2711	2983	2,41	3258	3258	3258	750	ESTER / ISO22	Capillary Tube or Expansion Valve	SM17

220V 50 Hz   R290   LBP													
Model	Origin	Refrigerant	Displacement	Voltage	Envelope	Torque	Motor	LRA	Test Condition	Frequency	-40	-35	
EM2U3111U	BR	R290	3	220-240 V 50-60 Hz 1 ~	L/MBP	LST	RSCR	5,8	ASHRAELBP32	50 Hz			
EM150UER	BR	R290	3	220-240 V 50-60 Hz 1 ~	L/MBP	LST	RSIR/CSIR	8,7	ASHRAELBP32	50 Hz		67	
EM2X3113U	CN	R290	3,67	220-240 V 50 Hz 1 ~	L/MBP	LST	RSCR	12,4	ASHRAELBP32	50 Hz			
EM70UER	BR	R290	4,08	220-240 V 50-60 Hz 1 ~	L/MBP	LST	RSIR/CSIR	9,4	ASHRAELBP32	50 Hz			
EM2X3117U	CN	R290	4,5	220-240 V 50 Hz 1 ~	L/MBP	LST	RSCR	15,3	ASHRAELBP32	50 Hz			
EM2X1121U	CN	R290	5,54	220-240 V 50 Hz 1 ~	LBP	LST	RSCR	8,4	ASHRAELBP32	50 Hz		137	
EM2X3121U	CN	R290	5,54	220-240 V 50 Hz 1 ~	L/MBP	LST	RSCR	15,6	ASHRAELBP32	50 Hz			
EM2X3121U	BR	R290	5,54	220-240 V 50-60 Hz 1 ~	L/MBP	LST	RSCR	7,8	ASHRAELBP32	50 Hz		156	
EMT2121U	CN	R290	5,56	220-240 V 50 Hz 1 ~	LLBP	LST	CSIR	7,7	ASHRAELBP32	50 Hz		147	
EMT2125U	CN	R290	5,96	220-240 V 50 Hz 1 ~	LBP	LST	CSIR	8,5	ASHRAELBP32	50 Hz		159	
EMTS2125U	CN	R290	5,96	220-240 V 50 Hz 1 ~	LBP	LST	CSIR	8,5	ASHRAELBP32	50 Hz		169	
EM2X1125U	CN	R290	6,09	220-240 V 50 Hz 1 ~	LBP	LST	RSCR	8,4	ASHRAELBP32	50 Hz		158	
EM2X3125U	CN	R290	6,09	220-240 V 50 Hz 1 ~	L/MBP	LST	RSCR	15,6	ASHRAELBP32	50 Hz			
EM2X3125U	BR	R290	6,09	220-240 V 50-60 Hz 1 ~	L/MBP	LST	RSCR	7,8	ASHRAELBP32	50 Hz			
FFU130UAX	BR	R290	6,76	220-240 V 50-60 Hz 1 ~	L/MBP	HST	CSIR	19	ASHRAELBP32	50 Hz		182	
EMX3134U	CN	R290	7,95	220-240 V 50 Hz 1 ~	L/MBP	LST	RSCR	10,5	ASHRAELBP32	50 Hz		235	
EMX3140U	CN	R290	9,5	220-240 V 50 Hz 1 ~	L/MBP	LST	RSIR	12,5	ASHRAELBP32	50 Hz		270	
EMTE2134U	CN	R290	9,5	220-240 V 50 Hz 1 ~	LLBP	HST	CSIR	14,9	ASHRAELBP32	50 Hz		175	
EHL2115U	CN	R290	12,21	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	18,8	ASHRAELBP32	50 Hz		267	
EHX2155U	CN	R290	12,21	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	18,4	ASHRAELBP32	50 Hz		263	
NEU2155U	SK	R290	13,54	220-240 V 50 Hz 1 ~	LBP	HST	CSCR	40	ASHRAELBP32	50 Hz		350	
NT2180U	SK	R290	22,37	220-240 V 50 Hz 1 ~	LBP	HST	CSCR	35	ASHRAELBP32	50 Hz			
NTX2211U	SK	R290	27,8	220-240 V 50 Hz 1 ~	LBP	HST	CSCR	33	ASHRAELBP32	50 Hz	597	797	
220V 50 Hz   R290   M/HBP													
Model	Origin	Refrigerant	Displacement	Voltage	Envelope	Torque	Motor	LRA	Test Condition	Frequency	-20	-15	
EMX6144U	SK	R290	4,53	220-240 V 50-60 Hz 1 ~	MBP	HST	CSIR	9	ASHRAEHP46	50 Hz	221	274	
EMX6152U	SK	R290	5,19	220-240 V 50-60 Hz 1 ~	MBP	HST	CSIR	11	ASHRAEHP46	50 Hz	235	294	
EMX6165U	SK	R290	6,09	220-240 V 50-60 Hz 1 ~	MBP	HST	CSIR	11	ASHRAEHP46	50 Hz	285	354	
EMX6181U	SK	R290	6,92	220-240 V 50 Hz 1 ~	MBP	HST	CSIR	13	ASHRAEHP46	50 Hz	346	423	
EMTE6181U	CN	R290	7,55	220-240 V 50 Hz 1 ~	MBP	HST	CSIR	16,5	ASHRAEHP46	50 Hz	386		
EMX6210U	SK	R290	9,04	220-240 V 50 Hz 1 ~	MBP	HST	CSIR	16	ASHRAEHP46	50 Hz	446	553	
EHU6212U	CN	R290	10,61	220-240 V 50 Hz 1 ~	MBP	HST	CSIR	18,8	ASHRAEHP46	50 Hz	548	672	
EHU6214U	CN	R290	12,21	220-240 V 50 Hz 1 ~	MBP	HST	CSIR	22	ASHRAEHP46	50 Hz	623	757	
NEU6220U	SK	R290	16,8	220-240 V 50 Hz 1 ~	MBP	HST	CSCR	22	ASHRAEHP46	50 Hz	817	1016	
NTX6233U	SK	R290	27,8	220-240 V 50 Hz 1 ~	MBP	HST	CSCR	40	ASHRAEHP46	50 Hz	1346	1667	
220V 50 Hz   R404A   LBP													
Model	Origin	Refrigerant	Displacement	Voltage	Envelope	Torque	Motor	LRA	Test Condition	Frequency	-40	-35	
EMT2117GK	BR	R404A	4,5	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	-	ASHRAELBP32	50 Hz	81	124	
EMT2121GK	BR	R404A	5,19	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	8,5	ASHRAELBP32	50 Hz	131	174	
EMT2125GK	BR	R404A	5,96	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	9,8	ASHRAELBP32	50 Hz	142	194	
EMT2130GK	BR	R404A	6,76	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	12,4	ASHRAELBP32	50 Hz	154	209	
NEK2134GK	SK	R404A	8,77	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	37,5	ASHRAELBP32	50 Hz			
NEU2140GK	SK	R404A	8,77	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	13,5	ASHRAELBP32	50 Hz			
NEU2140GK	SK	R404A	8,77	200-230 V 50 Hz / 208-230 V 60 Hz 1 ~	LBP	HST	CSIR	30	ASHRAELBP32	50 Hz			
NEK2150GK	SK	R404A	12,11	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	44	ASHRAELBP32	50 Hz			
NEU2155GK	SK	R404A	12,11	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	18	ASHRAELBP32	50 Hz			
NEU2168GK	SK	R404A	14,28	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	22	ASHRAELBP32	50 Hz			
NT2168GKV	SK	R404A	14,5	200-240 V / 50 Hz 230 V / 60 Hz	MBP	HST	CSIR	54,5	ASHRAELBP32	50 Hz			
NEU2178GK	SK	R404A	16,8	220-240 V 50 Hz 1 ~	LBP	HST	CSCR	21	ASHRAELBP32	50 Hz			
NT2178GK	SK	R404A	17,39	200-240 V / 50 Hz 230 V / 60 Hz	LBP	HST	CSCR	25	ASHRAELBP32	50 Hz		282	
NT2180GKV	SK	R404A	20,44	220-240 V 50 Hz 1 ~	LBP	HST	CSCR	40	ASHRAELBP32	50 Hz			
NT2192GK	SK	R404A	22,37	220-240 V 50 Hz 1 ~	LBP	HST	CSIR	35	ASHRAELBP32	50 Hz			
NT2210GK	SK	R404A	26,21	220-240 V 50 Hz 1 ~	LBP	HST	CSCR	33	EN12900	50 Hz			
NT2212GK	SK	R404A	27,8	220-240 V 50 Hz 1 ~	LBP	HST	CSCR	45	ASHRAELBP32	50 Hz			
NJ2212GK	SK	R404A	34,38	220-240 V 50 Hz 1 ~	LBP	HST	CSCR	36	ASHRAELBP32	50 Hz			
EH_2140GK	CN	R404A			UNDER DEVELOPMENT								
EH_2140GK	CN	R404A			UNDER DEVELOPMENT								
EH_2150GK	CN	R404A			UNDER DEVELOPMENT								
EH_2150GK	CN	R404A			UNDER DEVELOPMENT								
220V 50 Hz   R404A   M/HBP													
Model	Origin	Refrigerant	Displacement	Voltage	Envelope	Torque	Motor	LRA	Test Condition	Frequency	-20	-15	
EMT6144GK	BR	R404A	3,97	220-240 V 50 Hz 1 ~	MBP	HST	CSIR	7,7	ASHRAEHP46	50 Hz	228	286	
EMT6165GK	BR	R404A	5,19	220-240 V 50 Hz 1 ~	MBP	HST	CSIR	10,4	ASHRAEHP46	50 Hz	287	361	
EMT6152GK	BR	R404A	4,5	220-240 V 50 Hz 1 ~	MBP	HST	CSIR	8,5	ASHRAEHP46	50 Hz	255	321	
NEK6165GK	SK	R404A	6,2	220-240 V 50 Hz 1 ~	MBP	HST	CSIR	12,4	ASHRAEHP46	50 Hz	366	433	
NEK6181GK	SK	R404A	7,28	220-240 V 50 Hz 1 ~	MBP	HST	CSIR	26,5	ASHRAEHP46	50 Hz	384	463	
NEU6210GK	SK	R404A	7,28	220-240 V 50 Hz 1 ~	MBP	HST	CSIR	16	ASHRAEHP46	50 Hz			
NEU6212GK	SK	R404A	8,77	220-240 V 50 Hz 1 ~	MBP	HST	CSIR	19	ASHRAEHP46	50 Hz	466	595	
NEU6214GK	SK	R404A	9,99	200-230 V 50 Hz / 208-230 V 60 Hz 1 ~	MBP	HST	CSCR	26	ASHRAEHP46	50 Hz	552	690	
NEU6215GK	SK	R404A	12,11	220-240 V 50 Hz 1 ~	MBP	HST	CSCR	22	ASHRAEHP46	50 Hz	664	830	
NEK6217GK	SK	R404A	14,28	220-240 V 50 Hz 1 ~	MBP	HST	CSCR	21,5	ASHRAEHP46	50 Hz	733	910	
NT6220GK	SK	R404A	14,5	200-240 V 50 Hz / 230 V 60 Hz 1 ~	MBP	HST	CSIR	31	ASHRAEHP46	50 Hz	669	838	
NT6222GK	SK	R404A	17,39	200-220 V 50 Hz / 230 V 60 Hz 1 ~	MBP	HST	CSIR	30	ASHRAEHP46	50 Hz	758	992	
NT6224GK	SK	R404A	20,44	220-240 V 50 Hz 1 ~	MBP	HST	CSCR	29	ASHRAEHP46	50 Hz	952	1217	
NTU6234GKV	SK	R404A	23,74	220-240 V 50 Hz 1 ~	MBP	HST	CSCR	37,5	EN12900	50 Hz			
NJ9232GK	SK	R404A	26,11	220-240 V 50 Hz 1 ~	MBP	HST	CSCR	43	ASHRAEHP46	50 Hz			
NTU6238GKV	SK	R404A	26,2	220-240 V 50 Hz 1 ~	MBP	HST	CSR	37,5	EN12900	50 Hz			
NTU6240GKV	SK	R404A	27,8	220-240 V 50 Hz 1 ~	MBP	HST	CSCR	37,5	ARI4	50 Hz			
NJ9238GK	SK	R404A	32,67	230 V 50 Hz 1 ~	MBP	HST	CSCR	43	ASHRAEHP46	50 Hz	1411	1827	

embraco

Nidec

-30	-25	Cooling Capacity (°C)		-20	-15	-10	-5	Lubricant Oil Charge	Type/Viscosity	Expansion Device	Wiring Diagram
		( Evaporating Capacity (W)	-23,3°C / Condensing 54,4°C Efficiency (W/W)								
100	131	140	1,51	166	207	255	311	150	ESTER / ISO22	Capillary Tube	SM06
92	119	129	1,3	147	178	212	248	170	ALQUILB / ISO32	Capillary Tube	SM01/SM02
87	121	136	1,43	161	207	260	320	150	ESTER / ISO22	Capillary Tube	SM28
128	163	176	1,18	203	250	304	368	160	ALQUILB / ISO32	Capillary Tube	SM01/SM02
128	170	187	1,49	220	278	346	422	150	ESTER / ISO22	Capillary Tube	SM28
182	235	257	1,72	289	371	457		150	ESTER / ISO10	Capillary Tube	SM05
202	256	286	1,72	317	387	471	572	150	ESTER / ISO22	Capillary Tube	SM05
209	264	288	1,72	326	397	480	579	150	ESTER / ISO22	Capillary Tube	SM05
188	234	254	1,42	289	357	441		180	ESTER / ISO22	Capillary Tube	SM05
205	257	280	1,45	319	392	480		180	ESTER / ISO22	Capillary Tube	SM05
218	276	300	1,56	344	423	513		180	ESTER / ISO22	Capillary Tube	SM05
206	266	291	1,79	339	422	515		150	ESTER / ISO10	Capillary Tube	SM05
227	290	317	1,78	364	450	549	662	150	ESTER / ISO22	Capillary Tube	SM05
229	289	304	1,67	360	443	539	647	150	ESTER / ISO22	Capillary Tube	SM05
225	287	319	1,49	367	465	578	708	280	ALQUILB / ISO32	Capillary Tube or Expansion Valve	SM08
291	369	403	1,57	466	582	715	862	150	ESTER / ISO22	Capillary Tube	SM32
331	425	469	1,44	547	691	850	1018	150	ESTER / ISO22	Capillary Tube	SM07
309	392	437	1,44	491	608	745		210	ESTER / ISO22	Capillary Tube or Expansion Valve	SM05
444	558	603	1,52	691	845	1022		270	ESTER / ISO22	Capillary Tube or Expansion Valve	SM07
449	568	608	1,63	705	862	1039		270	ESTER / ISO22	Capillary Tube or Expansion Valve	SM07
473	603	655	1,61	757	933	1131		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13
660	859	939	1,47	1092	1360	1661		450	ESTER / ISO22	Capillary Tube or Expansion Valve	SM20
1033	1308	1317	1,54	1623	1980	2380		450	ESTER / ISO22	Capillary Tube or Expansion Valve	SM26

-10	-5	0	Cooling Capacity (°C)		7,2°C / Condensing 54,4°C Capacity (W)	Efficiency (W/W)	10	15	Lubricant Oil Charge	Type/Viscosity	Expansion Device	Wiring Diagram
			5	7,2°C / Condensing 54,4°C Capacity (W)								
337	410	495	590	639	268	696		150	ESTER / ISO10	Capillary Tube or Expansion Valve	SM29	
366	449	545	653	712	279	773		150	ESTER / ISO10	Capillary Tube or Expansion Valve	SM29	
437	535	646	771	837	2,72	910		150	ESTER / ISO10	Capillary Tube or Expansion Valve	SM29	
517	629	757	900	975	2,9	1059		150	ESTER / ISO10	Capillary Tube or Expansion Valve	SM29	
583	705	834	963	1025	2,75		210	ESTER / ISO22	Capillary Tube or Expansion Valve	SM05		
678	822	985	1167	1266	2,68	1367		150	ESTER / ISO10	Capillary Tube or Expansion Valve	SM29	
809	971	1152	1358	1457	2,6	1589		270	ESTER / ISO22	Capillary Tube or Expansion Valve	SM07	
920	1102	1302	1534	1651	2,56	1796		270	ESTER / ISO22	Capillary Tube or Expansion Valve	SM07	
1243	1500	1790	2117	2291	2,6	2481		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13	
2045	2481	2978	3538	3803	2,78	4163		450	ESTER / ISO22	Capillary Tube or Expansion Valve	SM26	

-30	-25	Cooling Capacity (°C)		-20	-15	-10	-5	Lubricant Oil Charge	Type/Viscosity	Expansion Device	Wiring Diagram
		( Evaporating Capacity (W)	-23,3°C / Condensing 54,4°C Efficiency (W/W)								
171	224	244	1,35	286	358	443		180	ESTER / ISO22	Capillary Tube or Expansion Valve	SM07
224	284	300	1,4	356	441	541		180	ESTER / ISO22	Capillary Tube or Expansion Valve	SM07
254	325	351	1,4	408	505	618		180	ESTER / ISO22	Capillary Tube or Expansion Valve	SM07
273	350	390	1,34	439	543	664		180	ESTER / ISO22	Capillary Tube or Expansion Valve	SM07
327	427	467	1,31	544	680	833		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13
341	446	489	1,37	569	711	870		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13
395	522	573	1,36	671	840	1032		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13
436	562	613	1,21	713	889	1091		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13
460	601	657	1,32	766	955	1168		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13
523	682	745	1,29	867	1078	1314		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13
435	585	646	1,29	763	969	1202		450	ESTER / ISO22	Capillary Tube or Expansion Valve	SM20
643	831	905	1,4	1050	1300	1583		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13
560	734	800	1,15	934	1160	1412		450	ESTER / ISO22	Capillary Tube or Expansion Valve	SM20
646	855	940	1,26	1100	1378	1689		450	ESTER / ISO22	Capillary Tube or Expansion Valve	SM20
726	960	1054	1,3	1233	1546	1899		450	ESTER / ISO22	Capillary Tube or Expansion Valve	SM21
640	839	667	1,03	1069	1331	1624		650	ESTER / ISO22	Capillary Tube or Expansion Valve	SM21
965	1265	1384	1,39	1617	2022	2483		650	ESTER / ISO22	Capillary Tube or Expansion Valve	SM21
1040	1403	1547	1,33	1814	2272	2780		750	ESTER / ISO22	Capillary Tube or Expansion Valve	SM16/SM17
UNDER DEVELOPMENT											
UNDER DEVELOPMENT											
UNDER DEVELOPMENT											
UNDER DEVELOPMENT											

-10	-5	0	Cooling Capacity (°C)		7,2°C / Condensing 54,4°C Capacity (W)	Efficiency (W/W)	10	15	Lubricant Oil Charge	Type/Viscosity	Expansion Device	Wiring Diagram
			5	7,2°C / Condensing 54,4°C Capacity (W)								
354	433	524	629	679	2,39	746		180	ESTER / ISO22	Capillary Tube or Expansion Valve	SM07	
448	550	667	801	877	2,23	951		180	ESTER / ISO22	Capillary Tube or Expansion Valve	SM07	
396	483	582	695	758	2,3	824		180	ESTER / ISO22	Capillary Tube or Expansion Valve	SM07	
519	625	751	895	975	2,09	1059		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13	
565	690	836	1006	1100	2,14	1199		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13	
600	741	903	1083	1180	2,31	1283		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13	
743	912	1101	1309	1423	2,24	1537		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13	
854	1029	1244	1486	1618	2,27	1753		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13	
1020	1235	1475	1740	1862	1,92	2029		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13	
1118	1358	1629	1932	2097	2,09	2266		350	ESTER / ISO22	Capillary Tube or Expansion Valve	SM13	
1050	1307	1607	1952	2139	2,24	2340		450	ESTER / ISO22	Capillary Tube or Expansion Valve	SM26	
1262	1570	1914	2295	2505	2,1	2713		450	ESTER / ISO22	Capillary Tube or Expansion Valve	SM26	
1532	1896	2311	2774	3022	2,37	3287		450	ESTER / ISO22	Capillary Tube or Expansion Valve	SM26	
1655	2022	2425	2847	3083	2,01	3270		650	ESTER / ISO22	Capillary Tube or Expansion Valve	SM26	
1945	2462	3052	3716	4080	2,6	4453		750	ESTER / ISO22	Capillary Tube or Expansion Valve	SM18	
1827	2234	2692	3187	2283	2,01	3706						

# COMPRESSORS CATALOGUE

## TRI-PHASE

**embraco**  
**Nidec**

TRI-PHASE												
Model	Origin	Refrigerant	Displacement	Voltage	Envelope	Torque	Motor	LRA	Test Condition	Frequency	-40	-35
NT2168GS	SK	R404A	14,5	200V/50-60Hz 3~	LBP	HST	3PHASE	28,5	ASHRAELBP32	50 Hz	219	313
NT2168GS	SK	R404A	14,5	200V/50-60Hz 3~	LBP	HST	3PHASE	28,5	ASHRAELBP32	60 Hz		
NT2192GS	SK	R404A	22,37	200V/50-60Hz 3~	LBP	HST	3PHASE	28,5	ASHRAELBP32	50 Hz	364	526
NT2192GS	SK	R404A	22,37	200V/50-60Hz 3~	LBP	HST	3PHASE	28,5	ASHRAELBP32	60 Hz		
NT2212GS	SK	R404A	27,8	200V/50-60Hz 3~	LBP	HST	3PHASE	36	ASHRAELBP32	50 Hz	479	668
NT2212GS	SK	R404A	27,8	200V/50-60Hz 3~	LBP	HST	3PHASE	36	ASHRAELBP32	60 Hz	523	767
NJ2121GS	SK	R404A	34,4	380-420V 50Hz / 440-480V 60Hz 3 ~	LBP	HST	3PHASE	20,6	ASHRAELBP32	60 Hz	294	637
NJ2121GS	SK	R404A	34,4	380-420V 50Hz / 440-480V 60Hz 3 ~	LBP	HST	3PHASE	20,6	ASHRAELBP32	50 Hz		
NJX2215US	SK	R290	38	400V 50Hz / 440V 60Hz	LBP	HST	3PHASE	21	ASHRAELBP32	50 Hz	686	945
NJX2215US	SK	R290	38	400V 50Hz / 440V 60Hz	LBP	HST	3PHASE	21	ASHRAELBP32	60 Hz	842	1116
NJX2219GS	SK	R404A	38	400V 50Hz / 440V 60Hz	LBP	HST	3PHASE	22	ASHRAELBP32	50 Hz	870	1176
NJX2219GS	SK	R404A	38	400V 50Hz / 440V 60Hz	LBP	HST	3PHASE	22	ASHRAELBP32	60 Hz	1007	1373

Model	Origin	Refrigerant	Displacement	Voltage	Envelope	Torque	Motor	LRA	Test Condition	Frequency	-20	-15
NTU6232GSV	SK	R404A	20,44	200-230 V 60 Hz 3 ~	MBP	HST	3PHASE	36	ASHRAEHB46	60 Hz		
NTU6234GSV	SK	R404A	23,74	200-230 V 60 Hz 3 ~	MBP	HST	3PHASE	36	ASHRAEHB46	60 Hz		
NJ9232GS	SK	R404A	26,11	380 420 V 50 Hz / 440 480 V 60 Hz 3~	MBP	HST	3PHASE	13	ASHRAEHB46	60 Hz	1323	1756
NJ9232GS	SK	R404A	26,11	380 420 V 50 Hz / 440 480 V 60 Hz 3~	MBP	HST	3PHASE	13	ASHRAEHB46	50 Hz	1131	1501
NTU6238GSV	SK	R404A	26,21	200-230 V 60 Hz 3 ~	MBP	HST	3PHASE	36	ASHRAEHB46	60 Hz		
NTU6240GSV	SK	R404A	27,8	200-230 V 60 Hz 3 ~	MBP	HST	3PHASE	40	ASHRAEHB46	60 Hz		
NJ9238GS	SK	R404A	32,67	380 420 V 50 Hz / 440 480 V 60 Hz 3~	MBP	HST	3PHASE	22	ASHRAEHB46	60 Hz		
NJ9238GS	SK	R404A	32,67	380 420 V 50 Hz / 440 480 V 60 Hz 3~	MBP	HST	3PHASE	22	ASHRAEHB46	50 Hz		
NJ6226ZX	SK	R134a	34,38	380 420 V 50 Hz / 440 480 V 60 Hz 3~	HBP	HST	3PHASE	13	ASHRAEHB46	60 Hz		
NJ6226ZX	SK	R134a	34,38	380 420 V 50 Hz / 440 480 V 60 Hz 3~	HBP	HST	3PHASE	13	ASHRAEHB46	50 Hz		
NJX6244US	SK	R290	38	400V 50Hz / 440V 60Hz	MBP	HST	3PHASE	22	ASHRAEHB46	50 Hz	1831	2216
NJX6244US	SK	R290	38	400V 50Hz / 440V 60Hz	MBP	HST	3PHASE	22	ASHRAEHB46	60 Hz	2129	2656
NJX6250GS	SK	R404A	38	400V 50Hz / 440V 60Hz	MBP	HST	3PHASE	22	ASHRAEHB46	50 Hz	1751	2238
NJX6250GS	SK	R404A	38	400V 50Hz / 440V 60Hz	MBP	HST	3PHASE	22	ASHRAEHB46	60 Hz	1987	2631

( Evaporating -23,3°C / Condensing 54,4°C )							Lubricant		Expansion Device	
-30	-25	Capacity (W)	Efficiency (W/W)	-20	-15	-10	-5	Oil Charge	Type/Viscosity	
438	595			783	1001	1249	650	ESTER / ISO22	Capillary Tube or Expansion Valve	
486	707	792	1,32	955	1229	1532	650	ESTER / ISO22	Capillary Tube or Expansion Valve	
724	960			1233	1542	1889	650	ESTER / ISO22	Capillary Tube or Expansion Valve	
838	1121	1236	1,37	1456	1842	2279	650	ESTER / ISO22	Capillary Tube or Expansion Valve	
910	1206	1325	1,31	1556	1959	2417	650	ESTER / ISO22	Capillary Tube or Expansion Valve	
1063	1412	1571	1,31	1813	2267	2773	650	ESTER / ISO22	Capillary Tube or Expansion Valve	
1043	1513	1653	1,29	2047	2644	3304	750	ESTER / ISO22	Capillary Tube or Expansion Valve	
951	1321	1477	1,32	1752	2243	2796	750	ESTER / ISO22	Capillary Tube or Expansion Valve	
1258	1626	1769	1,55	2049	2526	3057	750	ESTER / ISO22	Capillary Tube or Expansion Valve	
1459	1871	2026	1,52	2353	2903	3523	750	ESTER / ISO22	Capillary Tube or Expansion Valve	
1553	2002	2164	1,47	2522	3112	3774	750	ESTER / ISO22	Capillary Tube or Expansion Valve	
1827	2368	2611	1,45	2997	3714	4518	750	ESTER / ISO22	Capillary Tube or Expansion Valve	

(Evaporating 7,2°C / Condensing 54,4°C)							Lubricant		Expansion Device	
-10	-5	0	5	Capacity (W)	Efficiency (W/W)	10	15	Oil Charge	Type/Viscosity	
				3982	2,8			650	ESTER / ISO22	Capillary Tube or Expansion Valve
				4574	2,67			650	ESTER / ISO22	Capillary Tube or Expansion Valve
2275	2881	3571	4348	4775	2,55	5211	750	ESTER / ISO22	Capillary Tube or Expansion Valve	
1945	2462	3052	3716	4080	2,54	4453	750	ESTER / ISO22	Capillary Tube or Expansion Valve	
				4877	2,49			650	ESTER / ISO22	Capillary Tube or Expansion Valve
				5292	2,54			650	ESTER / ISO22	Capillary Tube or Expansion Valve
2833	3536	4337	5236	5730	2,59	6233	750	ESTER / ISO22	Capillary Tube or Expansion Valve	
2421	3022	3707	4475	4897	2,59	5326	750	ESTER / ISO22	Capillary Tube or Expansion Valve	
				2610	3526	2,55	3851	750	ESTER / ISO22	Capillary Tube or Expansion Valve
				1768	2231	3014	2,55	750	ESTER / ISO22	Capillary Tube or Expansion Valve
2710	3313	4025	4845	5218	2,73	5775	750	ESTER / ISO22	Capillary Tube or Expansion Valve	
3267	3962	4740	5603	5976	2,51		750	ESTER / ISO22	Capillary Tube or Expansion Valve	
2839	3792	4609	5527	6016	2,37	6546	750	ESTER / ISO22	Capillary Tube or Expansion Valve	
3378	4433	5353	6371	6971	2,16	7486	750	ESTER / ISO22	Capillary Tube or Expansion Valve	

**embraco**  
**Nidec**

# VARIABLE SPEED COMPRESSORS

**embraco**  
**Nidec**

Variable Speed Compressors		220-240V		50/60Hz		R600a				HP	APPLICATION	TORQUE	MOTOR TYPE	EXPANSION DEVICE	LUBRICANT		WEIGHT	TEST CONDITION	INVERTER	
MODEL	REFRIGERANT	VOLTAGE / FREQUENCY		Cooling Capacity	Efficiency	RPM	BTU/h	W	BTU	W/W	OIL CHARGE	Type / Viscosity	KG							
FMXY4C	R600a	230V 43-134Hz 3~	2000	119	35	5,13	1,5				1/16	L/MBP	LST	BPM	CapillaryTube	175	ALQUILB / ISO5	4,8	ASHRAELBP32	CF02D01 M 0.0 X / CF02E01 M 0.0 X
			3000	172	50	5,39	1,58	4000	241	5,36										
FMAX4C	R600a	230V 43-134Hz 3~	2000	124	36	5,64	1,65				1/16	L/MBP	LST	BPM	CapillaryTube	175	ALQUILB / ISO5	4,9	ASHRAELBP32	CF02D01 M 0.0 X / CF02E01 M 0.0 X
			3000	185	54	5,59	1,64	4000	259	76										
FMDX4C	R600a	230V 43-134Hz 3~	2000	122	36	5,92	1,73				1/16	L/MBP	LST	BPM	CapillaryTube	175	ALQUILB / ISO5	4,9	ASHRAELBP32	PFC CF02D02 M
			3000	168	49	5,6	1,64	4000	247	72										
FMXY6C	R600a	230V 43-134Hz 3~	2000	222	65	5,61	1,64				1/10	L/MBP	LST	BPM	CapillaryTube	175	ALQUILB / ISO5	4,9	ASHRAELBP32	CF02D01 M 0.0 X / CF02E01 M 0.0 X
			3000	331	97	5,6	1,64	4000	413	121										
FMAX6C	R600a	230V 43-134Hz 3~	2000	222	65	6,1	1,79				1/10	L/MBP	LST	BPM	CapillaryTube	175	ALQUILB / ISO5	4,9	ASHRAELBP32	CF02D01 M 0.0 X / CF02E01 M 0.0 X
			3000	333	98	6,14	1,8	4000	413	121										
FMXC6C	R600a	230V 43-134Hz 3~	2000	223	65	6,21	1,82				1/9	L/MBP	LST	BPM	CapillaryTube	175	ALQUILB / ISO5	4,8	ASHRAELBP32	VES2456 XXX X / CF02D01 M 0.0 X
			3000	333	98	6,09	1,78	4000	407	119										
FMDX6C	R600a	230V 43-134Hz 3~	2000	230	67	6,53	1,91				1/9	L/MBP	LST	BPM	CapillaryTube	175	ALQUILB / ISO5	4,9	ASHRAELBP32	VESF2456 XXX X / PFC CF02D02 M
			3000	340	102	6,46	1,89	4000	429	126										
FMXY9C	R600a	230V 43-134Hz 3~	2000	334	98	5,83	1,71				1/7	L/MBP	LST	BPM	CapillaryTube	175	ALQUILB / ISO5	4,8	ASHRAELBP32	CF02D01 M 0.0 X / CF02E01 M 0.0 X
			3000	495	145	5,97	1,75	4000	614	180										
FMAX9C	R600a	230V 43-134Hz 3~	2000	342	100	6,37	1,87				1/6	L/MBP	LST	BPM	CapillaryTube	175	ALQUILB / ISO5	4,8	ASHRAELBP32	CF02D01 M 0.0 X / CF02E01 M 0.0 X
			3000	514	151	6,35	1,86	4000	632	185										
FMDX9C	R600a	230V 43-134Hz 3~	2000	339	99	6,49	1,9				1/6	L/MBP	LST	BPM	CapillaryTube	175	ALQUILB / ISO5	4,9	ASHRAELBP32	PFC CF02D02 M / VESF2456 XXX X
			3000	520	152	6,45	1,89	4000	637	187										
VEMB11C	R600a	230V 53-150Hz 3~	2000	460	135	6,48	1,9				-	LBP	LST	BPM	CapillaryTube or Expansion Valve	450	ALQUILB / ISO5	7,63	ASHRAELBP32	CF02D01 M 0.0 X / VCC32456XXXX / PFC CF02D01 M
			3000	697	204	6,45	1,89	4500	959	281										
VESC11C	R600a	230V 40-150Hz 3~	2000	467	137	6,57	1,93				1/5	LBP	LST	BPM	CapillaryTube	160	ALQUILB / ISO5	6,43	ASHRAELBP32	PFC CF02D01 M
			3000	707	207	6,53	1,91	4500	942	276										
VESD11C	R600a	230V 40-150Hz 3~	2000	707	207	6,53	1,91				1/5	LBP	LST	BPM	CapillaryTube or Expansion Valve	180	ALQUILB / ISO5	6,75	ASHRAELBP32	VES 2456 XX X / PFC CF02D01 M
			3000	707	207	6,53	1,91	4500	942	276										


  

Variable Speed Compressors		220-240V		50/60Hz		R230				HP	APPLICATION	TORQUE	MOTOR TYPE	EXPANSION DEVICE	LUBRICANT		WEIGHT	TEST CONDITION	INVERTER	
MODEL	REFRIGERANT	VOLTAGE / FREQUENCY		Cooling Capacity	Efficiency	RPM	BTU/h	W	BTU	W/W					OIL CHARGE	Type / Viscosity				
FMFT406U	R290	230V 45-150Hz 3~	1800	647	190	6,19	1,81				1/3	L/MBP	HST	BPM	CapillaryTube or Expansion Valve	430	ESTER / ISO22	10,28	ASHRAELBP32	CF10C02 M 0.1 X / CF06D01 X XX / CF10B02 N 0.1 X
			2500	846	248	6,1	1,79	3000	1110	325										
VESA7U	R290	230V 53-133Hz 3~	1600	620	182	5,54	1,62				1/5	LMBP	LST	BPM	Capillary tube	198	ESTER / ISO22	6,5	ASHRAELBP32	VCC3C02456XX
			2000	796	233	5,76	1,69	3000	1238	363										
VEGT8U	R290	230V 60-150Hz 3~	1600	1646	482	5,91	1,73				1/2	LMBP	HST	BPM	Capillary Tube or Expansion Valve	450	ESTER / ISO22	10,28	ASHRAELBP32	CF10B02 N 0.1 X / CF10C02 N 0.0 X
			1800	853	250	6,18	1,81	2400	1141	334										
FMFT411U	R290	230V / 60-150Hz	1800	1191	349	6,08	1,78				3/4	LMBP	LST/HST	BPM	Capillary tube or Expansion Valve	430	ESTER / ISO22	10,87	ASHRAELBP32	CF10B01 N 0.1 X / CF10C01 M 0.1 X
			2400	1592	490	6,79	1,99	3000	2059	603										
FMFD413UE	R290	230V / 53-167Hz	1600	1228	331	6,67	1,95													


# OPERATING ENVELOPE

**EMC, EMX, NE, NT, NJ, VNE**


**LBP**  
R134a - R600a

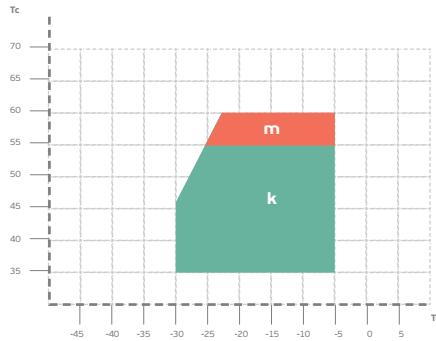


**LBP**  
R404A/R507/R452A - R290

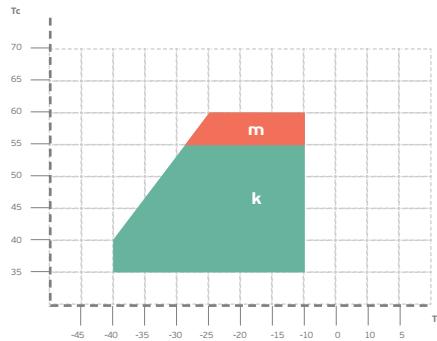


**MBP**  
R404A/R507/R452A - R290

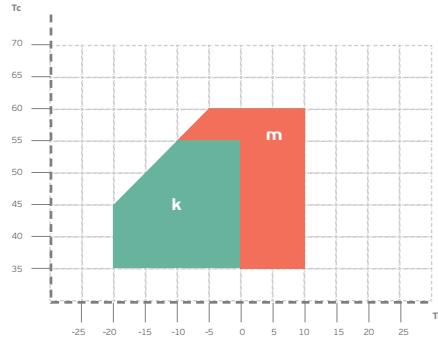


**L/MBP**  
R290

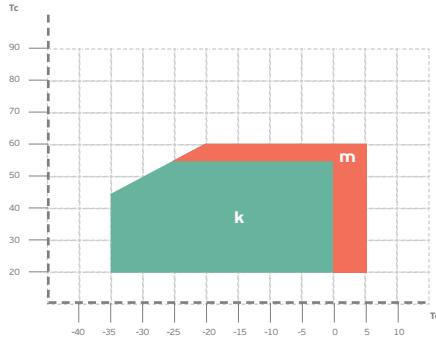

**ULBP**  
R508B/R170 - second stage of cascade

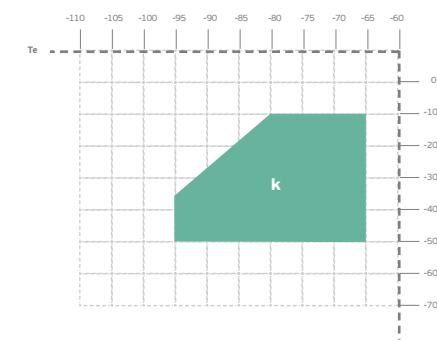


**HBP**  
R134a - R600a

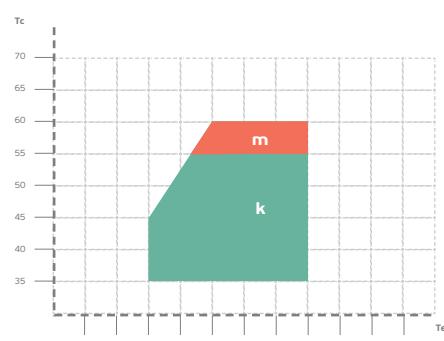


## EM, EG, F, VEM, VEG, VES

Ambient temperature: 42,7 °C - Return temperature: 32,2 °C


**LBP**  
R290 - R134a - R600a

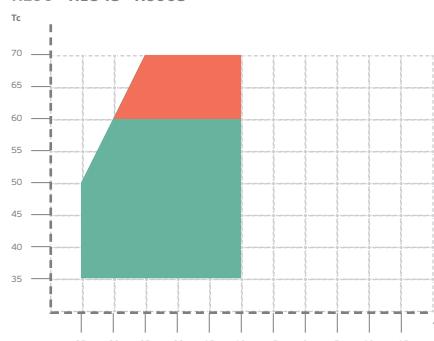

**L-MBP (STANDARD)**  
R290 - R134a

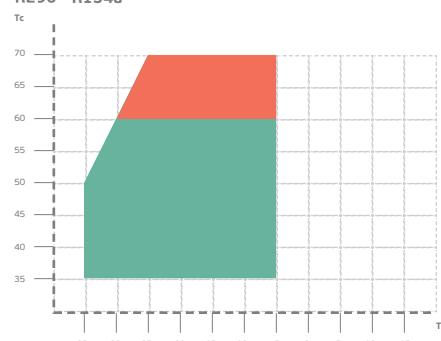


**M-HBP**  
R134a

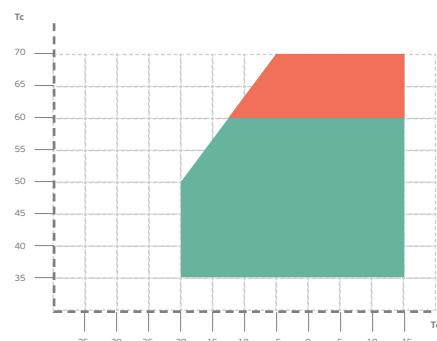


## L-MBP EXTENDED RANGE FFUS, EM2, EM3

R290 - R134a - R600a

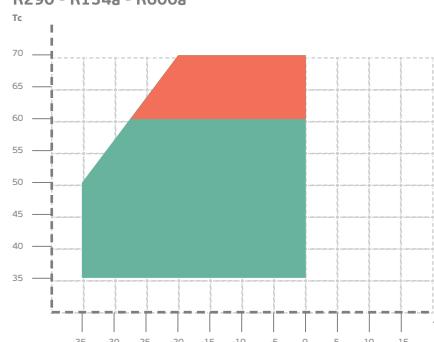

**L-M-HBP**  
R134a

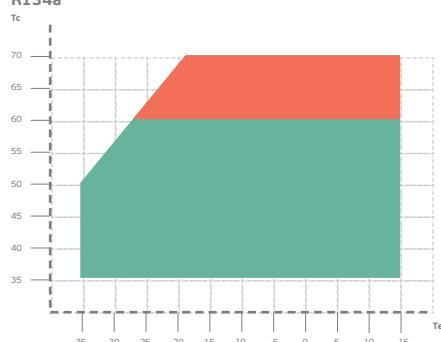

■ Operation Condition  
■ Transient Condition

**Tc** Condensing Temperature  
**k** Ambient 32°C and return gas 20°C  
**Te** Evaporating Temperature  
**m** Ambient 32°C and return gas 20°C  
(for transitory period)

**NOTE:** usage of compressors outside the intended working range cannot make use of the warranty, or should be consulted with Technical support.



# ELECTRICAL CONFIGURATIONS

## WIRING DIAGRAMS KEY



	OVERLOAD PROTECTOR		PTC START DEVICE*
	OVERLOAD PROTECTOR		INTEGRATED PTC DEVICE
	CURRENT START RELAY		CURRENT START RELAY WITH CAPACITOR CONNECTIONS
	3CR CURRENT START RELAY		3ARR3 START RELAY (VOLTAGE).
	RUN CAPACITOR		RUN CAPACITOR (MANDATORY - NOT SUPPLIED)
	OPTIONAL RUN CAPACITOR		START CAPACITOR
	FAN		PUSH BUTTON
	LAMP		SINGLE PHASE MOTOR
	3-PHASE MOTOR		THERMOSTAT
	LOW-HIGH PRESSURE SWITCH		PILOT CIRCUIT 24 OR 220 V
	EARTH CONNECTION		COMMON (INTERNAL OVERLOAD PROTECTOR)
	3-PHASE SUPPLY		START
	SINGLE PHASE SUPPLY		
	COMMON		
	RUN		
	TERMINAL BLOCK		BROWN CABLE
<u>Wh</u>	WHITE CABLE		BLACK CABLE
<u>Bl</u>	BLUE CABLE		RED CABLE
<u>YG</u>	YELLOW-GREEN CABLE		CONNECTIONS TO BE MADE BY THE CUSTOMER (NOT SUPPLIED)
	CONNECTIONS SUPPLIED		

## WIRING DIAGRAMS



SM00 - EMT/NE SERIES RSIR PTC European Version

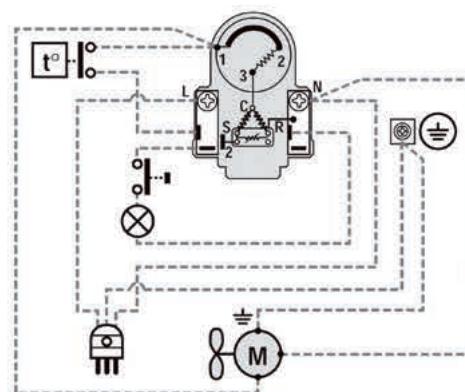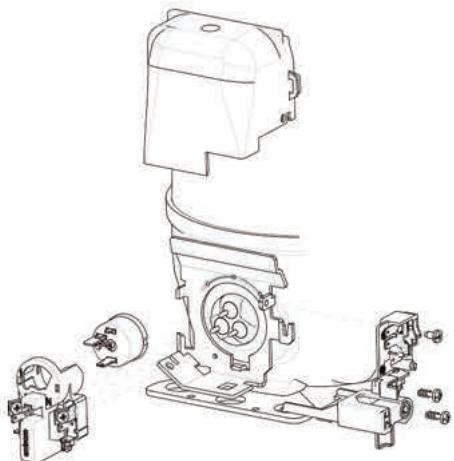

SM01 - EMT/NE SERIES RSCR PTC European Version

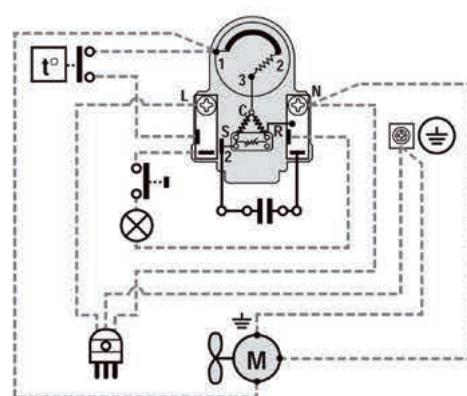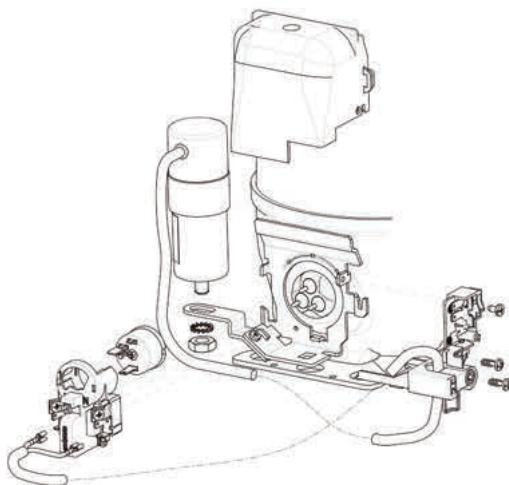


SM02 - EMT/NE SERIES RSCR TSD European Version

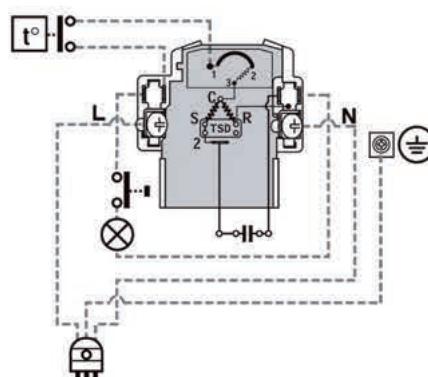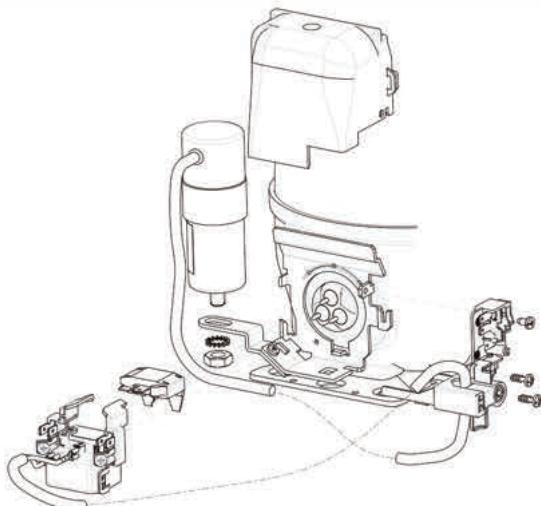


## WIRING DIAGRAMS


SM03 - EMT/NE SERIES RSIR Terminal Board & Start Device

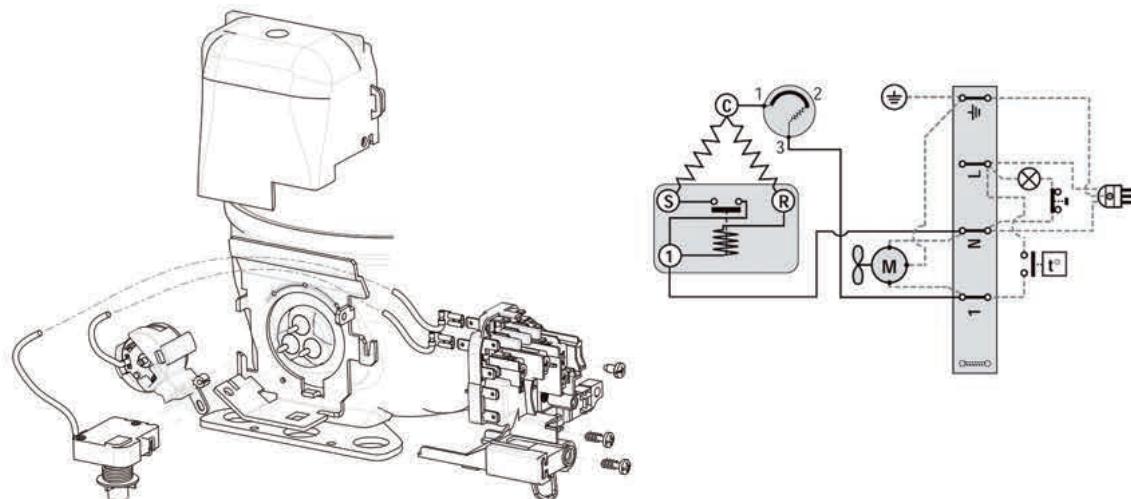

SM04 - EMT/NE SERIES CSIR American Version

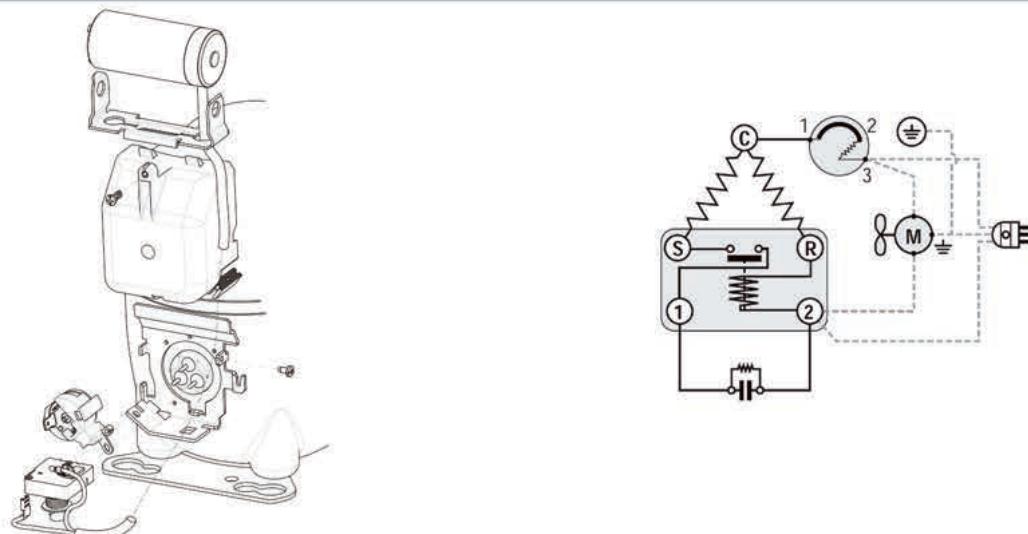


SM05 - EMT/NE SERIES CSIR Terminal Board & Start Device

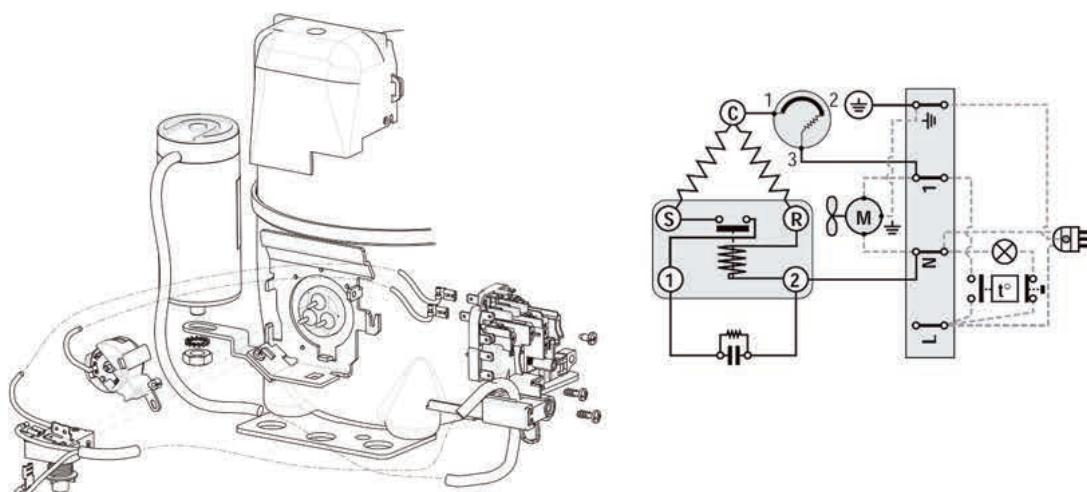


**embraco**  
**Nidec**


## SM06 - NE SERIES CSR Box

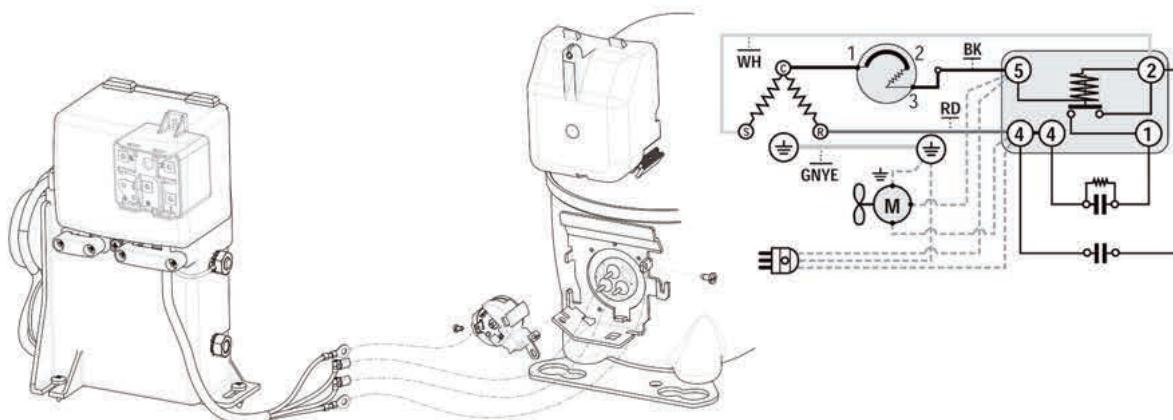

## SM07 - EM/EMI

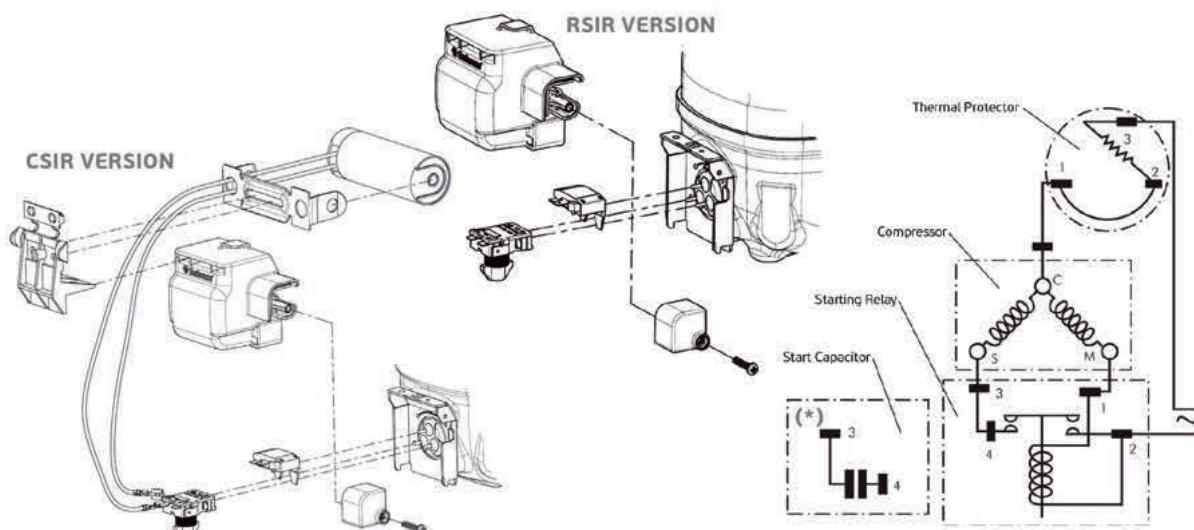


## SM08 - F COMPRESSORS

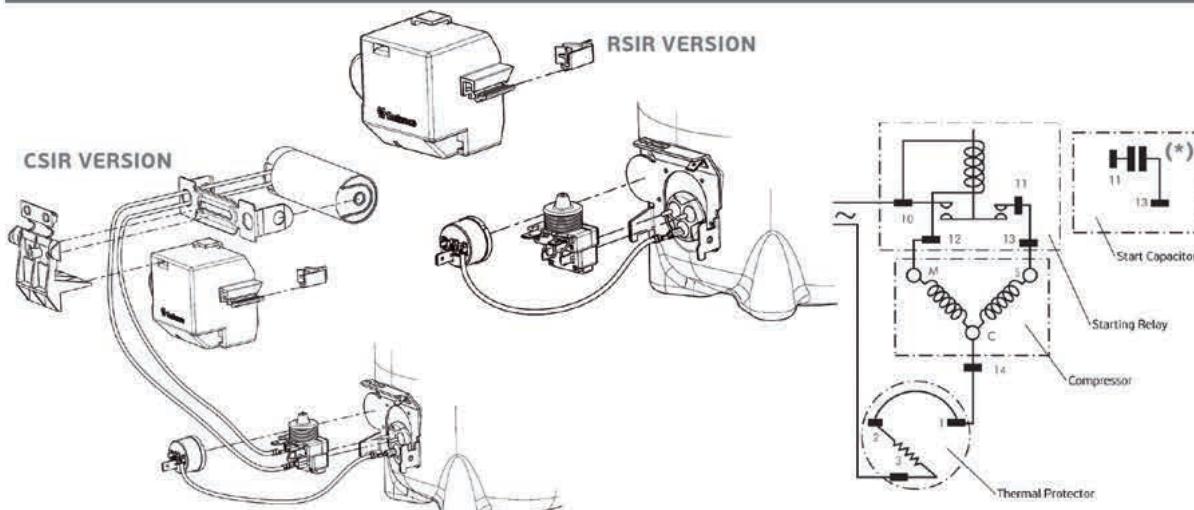


(\*) Valid only for CSIR version

# WIRING DIAGRAMS


SM09 - EG

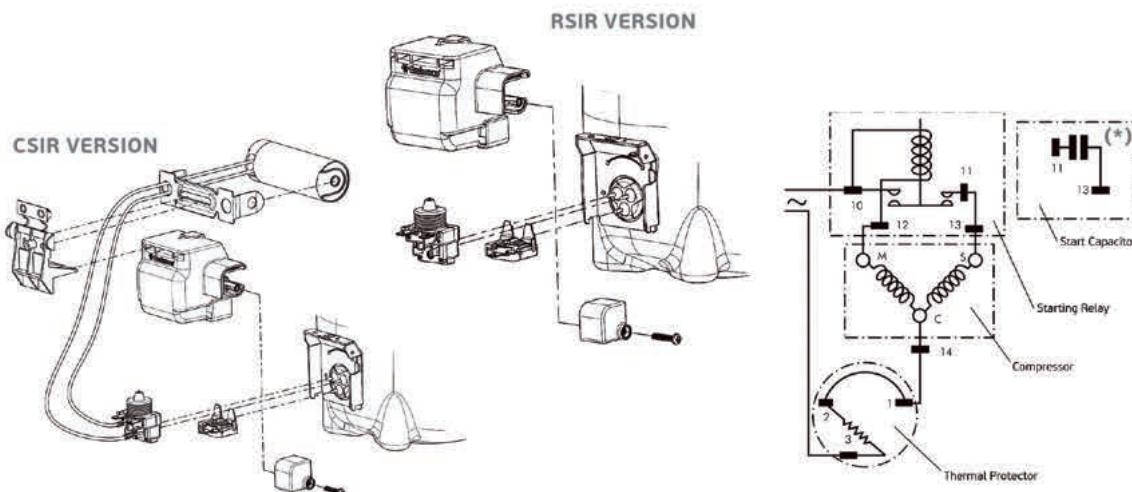

SM10 - NE CSR Box

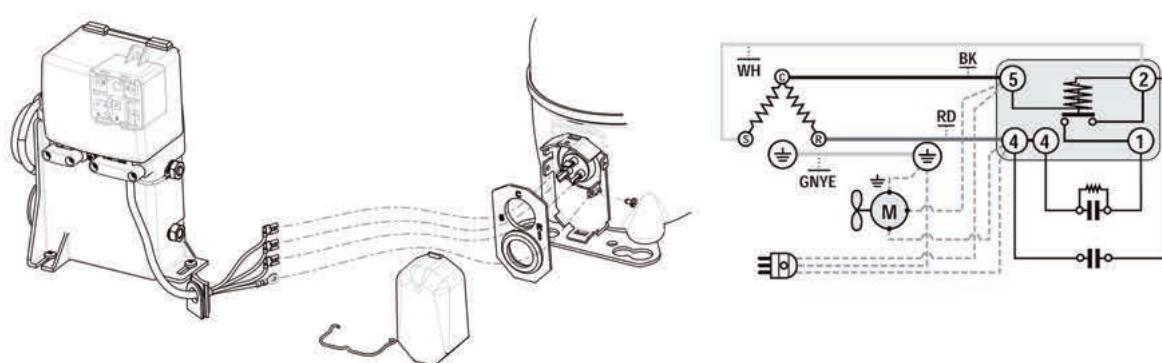


SM14 - NJ CSIR Box

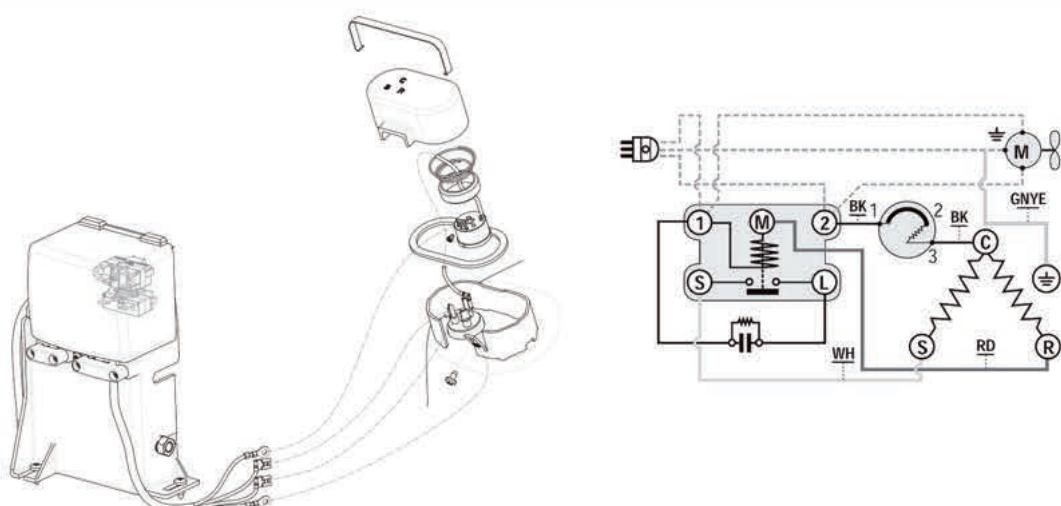


(\*) Valid only for CSIR version

**embraco**  
**Nidec**


### SM15 - NJ PSC

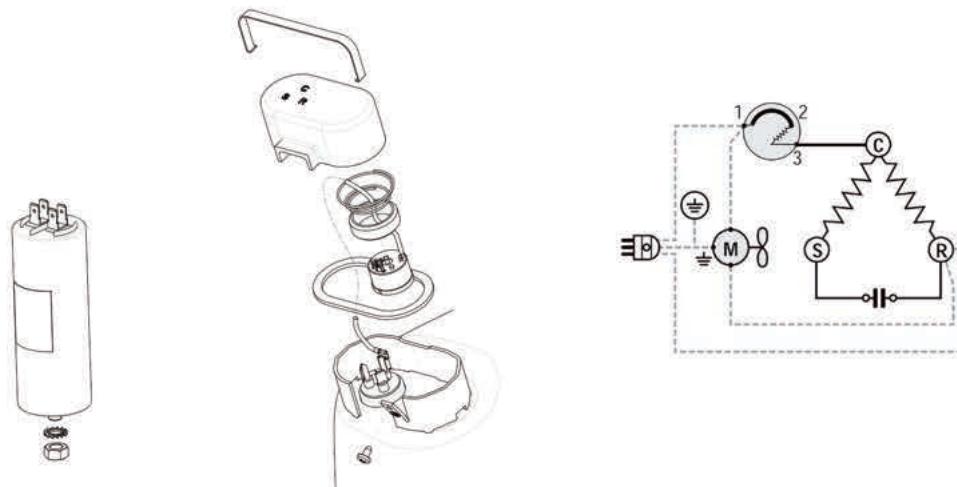

### SM16 - NJ SERIES CSR Box (Internal Overload Protector)


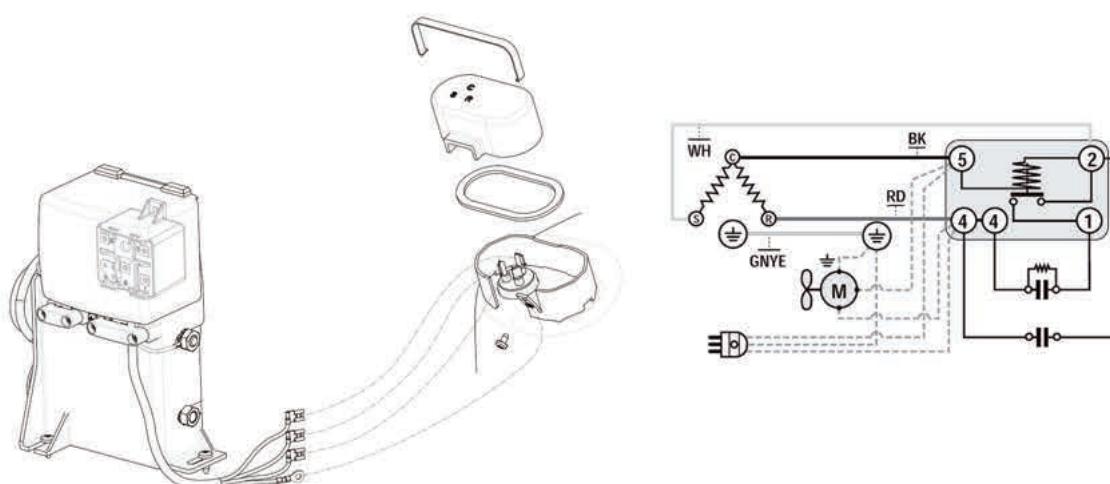


### SM17 - NJ CSR Box (External Overload Protector)


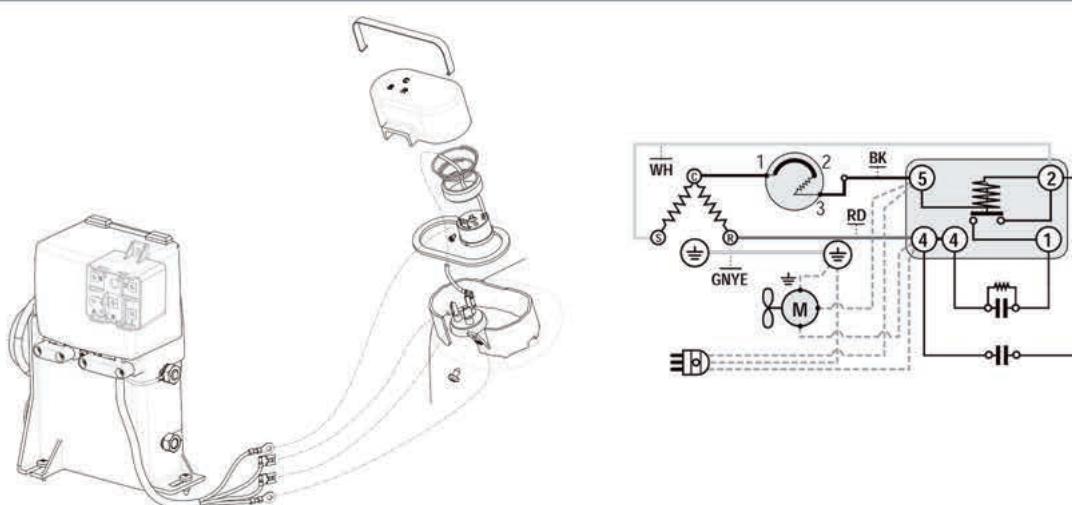


## WIRING DIAGRAMS


SM18 - NJ SERIES 3-Phase (Internal Overload Protector)

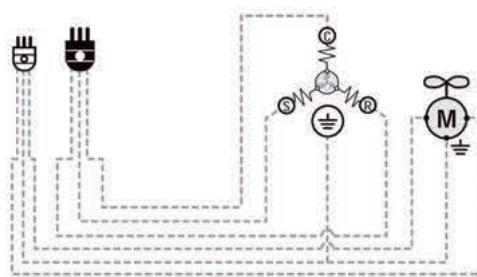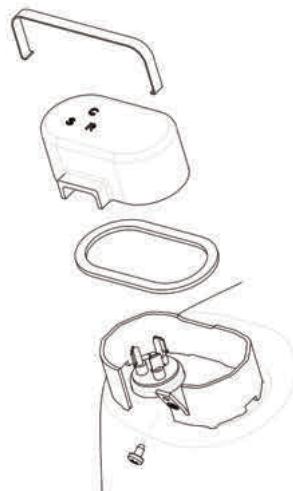

SM19 - NT SERIES CSIR Terminal Board

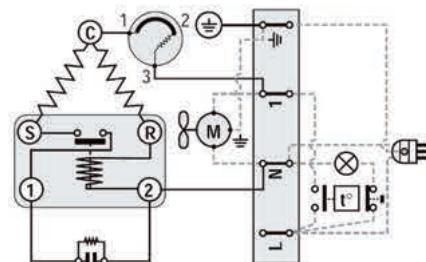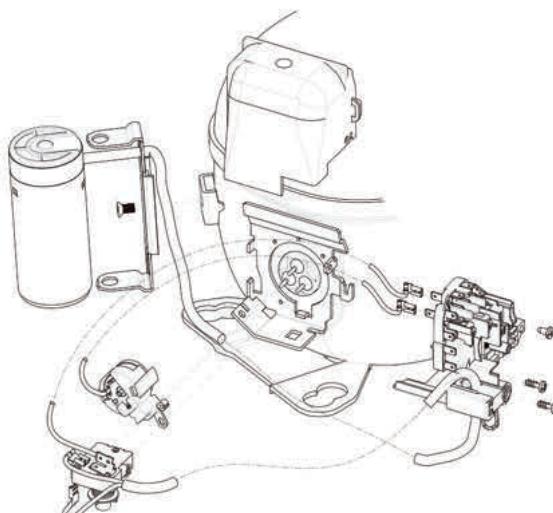


SM20 - NT SERIES CSIR – American Version

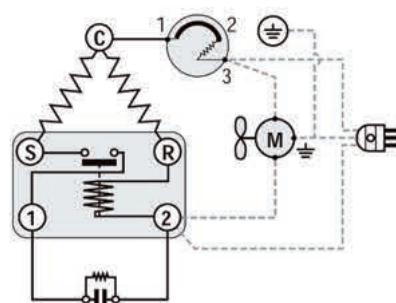


**embraco**  
**Nidec**


### SM21 - NT SERIES CSR Box

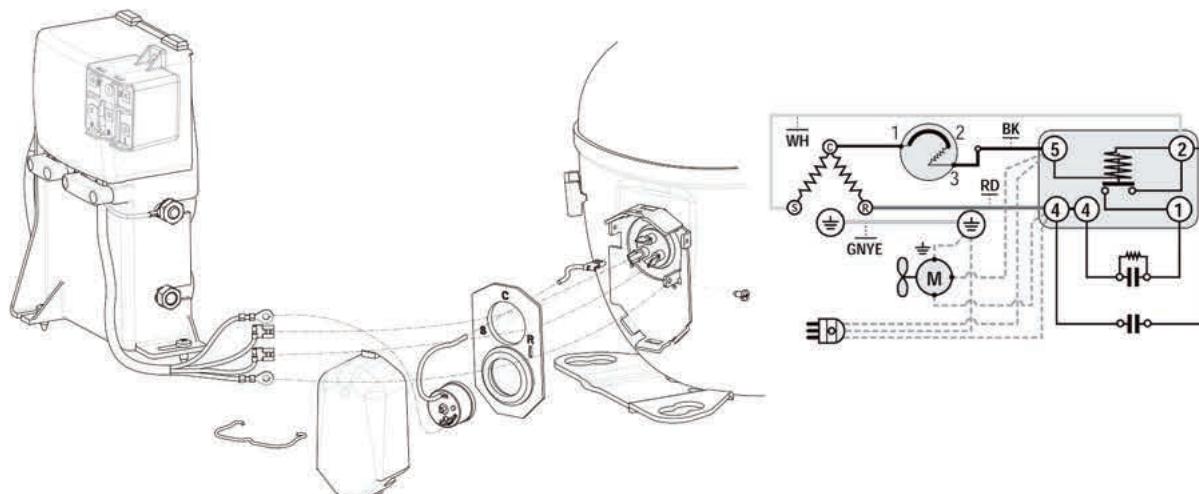

### SM23 - NT SERIES CSR Box


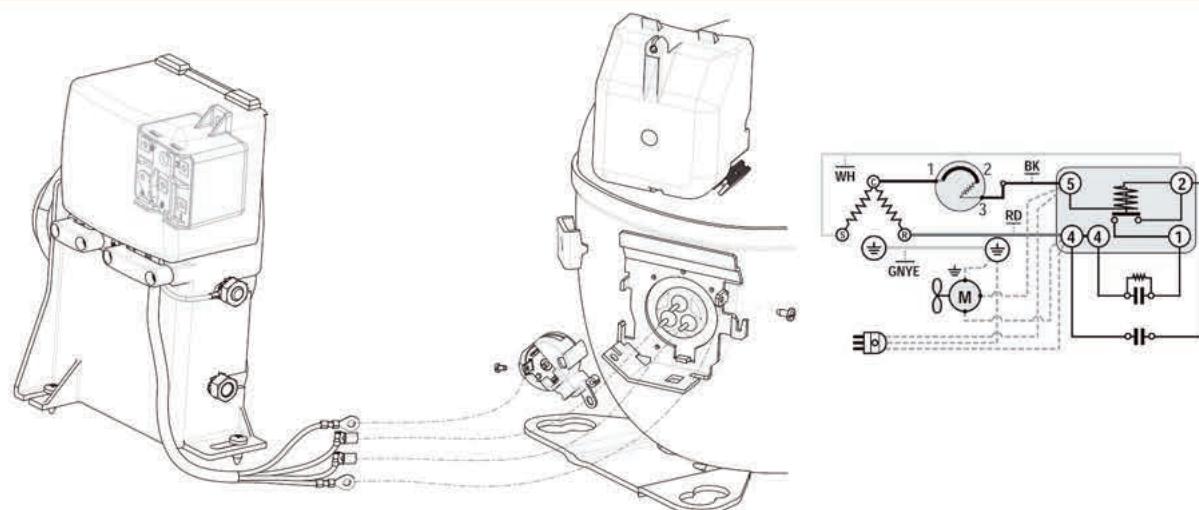


### SM26 - NT SERIES CSR Box (Internal Overload Protector)


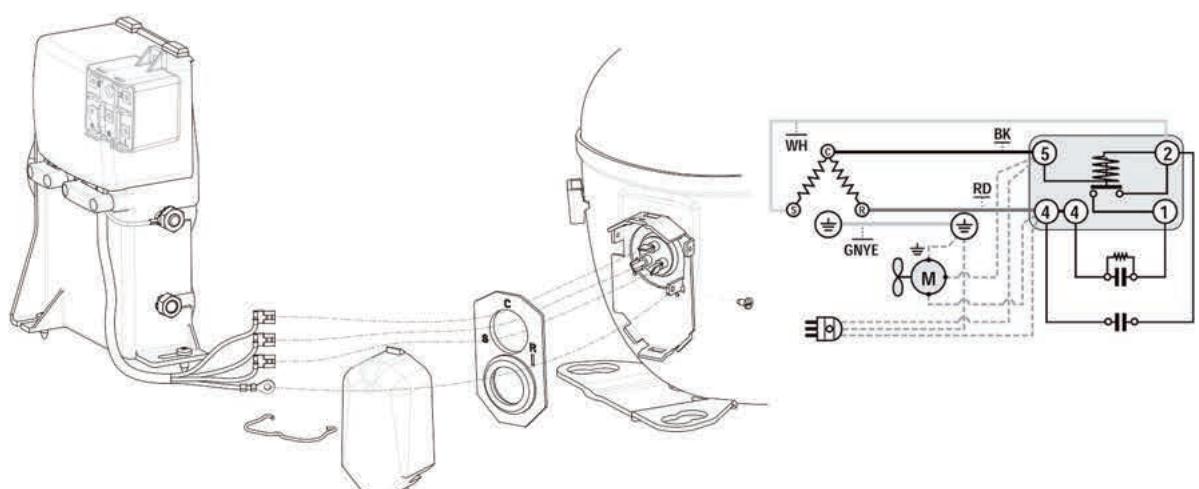


# WIRING DIAGRAMS

SM27 - NT SERIES 3-Phase (Internal + External Overload Protector)

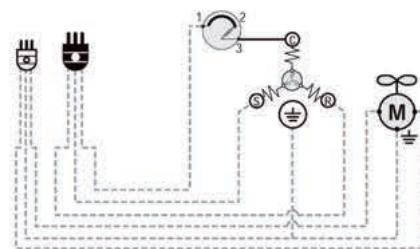
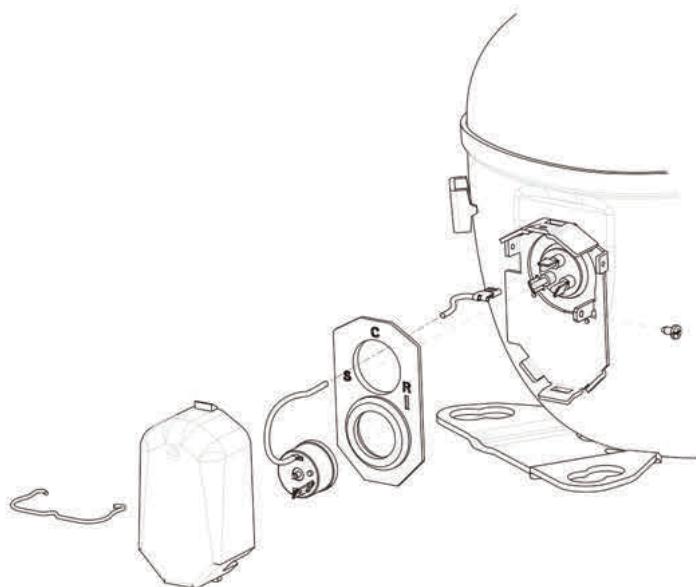


SM29 - EMX SERIES CSIR TERMINAL BOARD & START DEVICE & 4TM

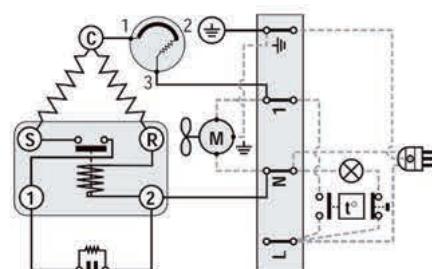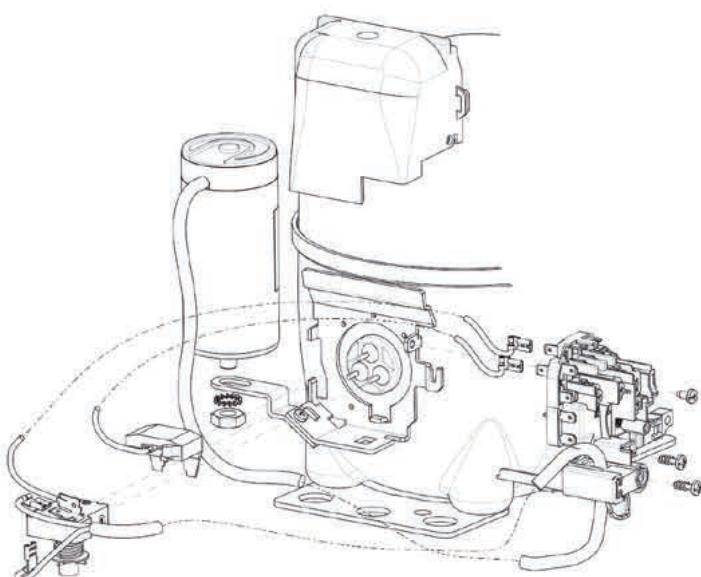


embraco  
Nidec


## SM32 - EM RSCR PTC & 4TM

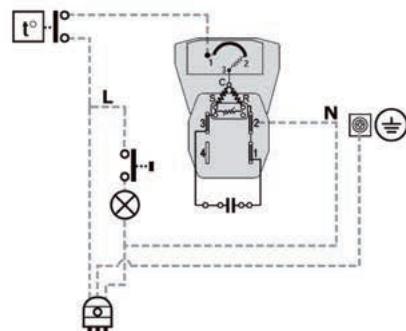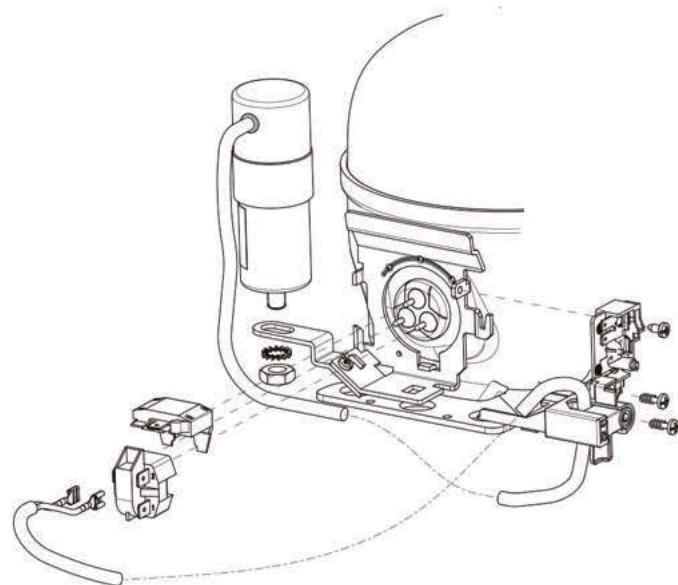

## SM34 - EG,F RSCR

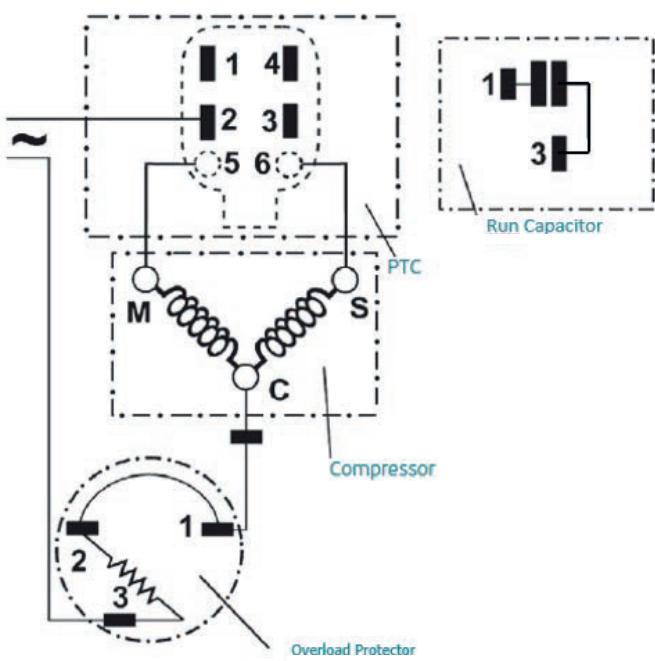


## SM33 - EM CSCR

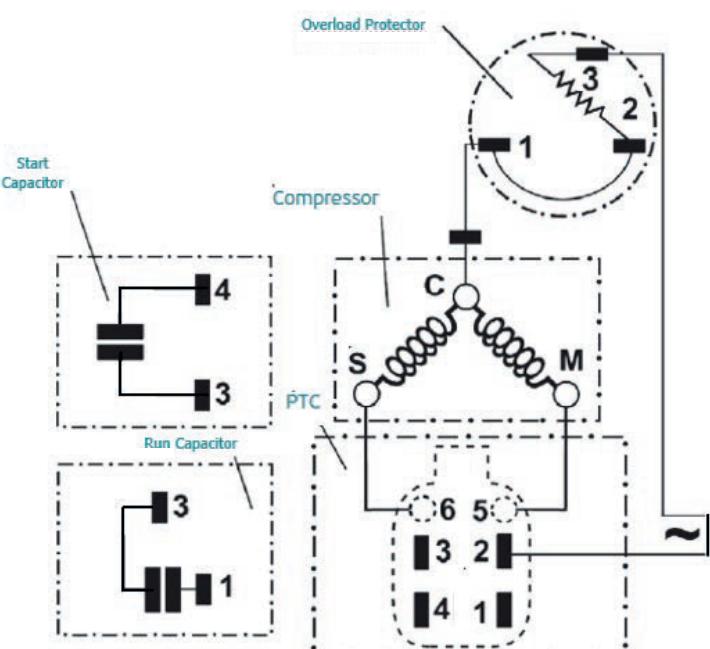


## WIRING DIAGRAMS


### CON01 - VEMY6 / VEG (Drop-in)

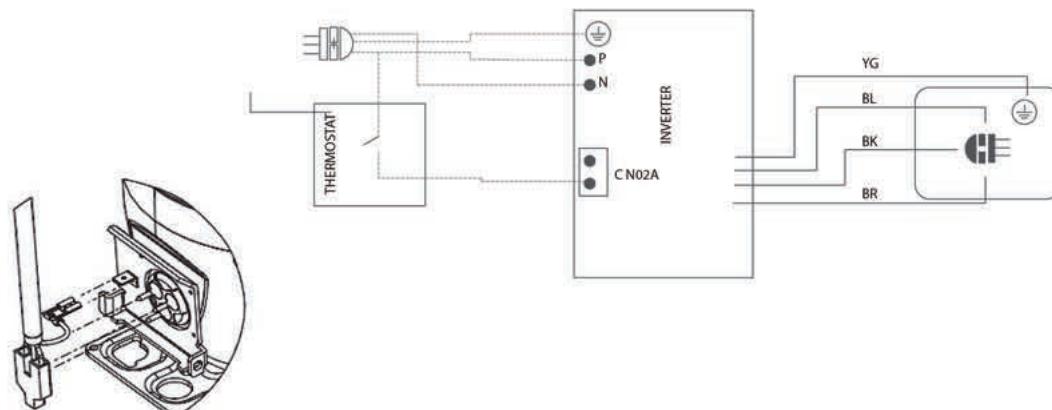

### CON02 - VEM / VEG (Frequency)


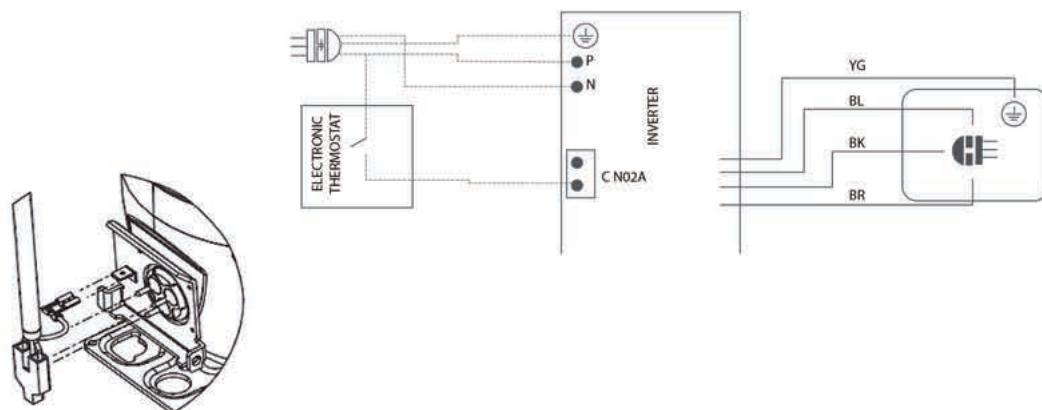


### CON03 - VEMY6 / VEG (Serial)


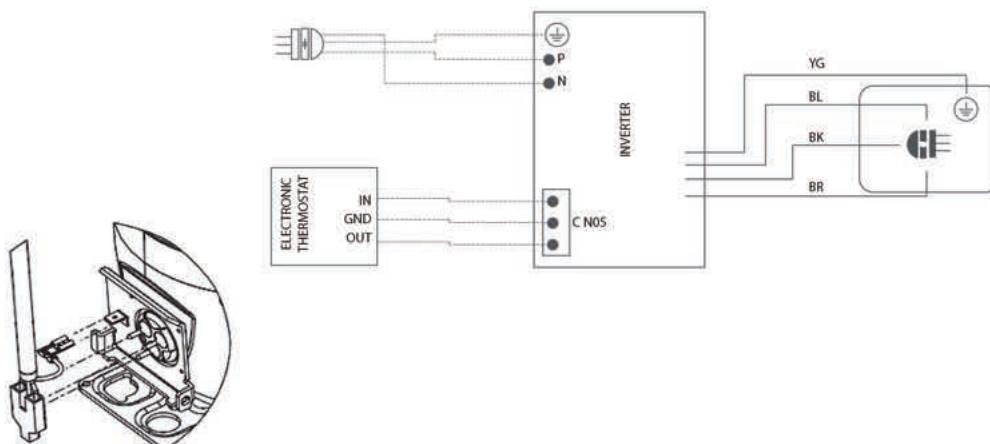


**embraco**  
**Nidec**



### CON04 - VEM (Frequency)

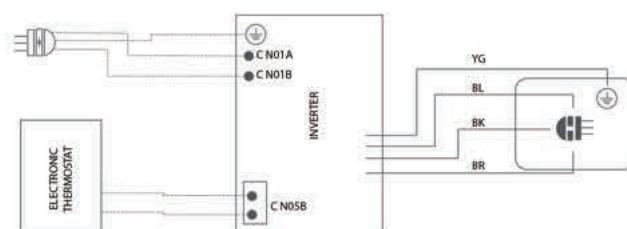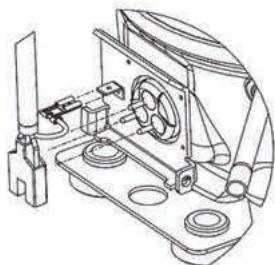

### CON05 - VEM (Serial)

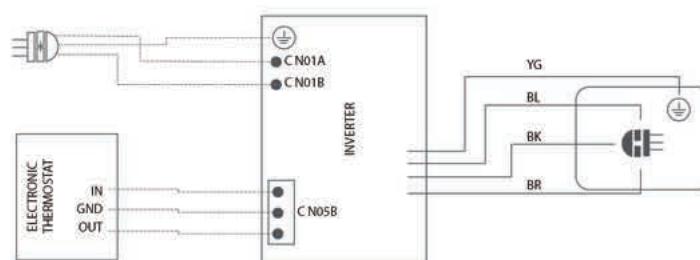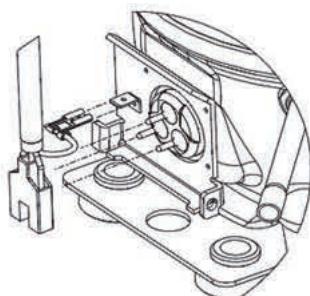



### CON06 - VEM (Drop-in)

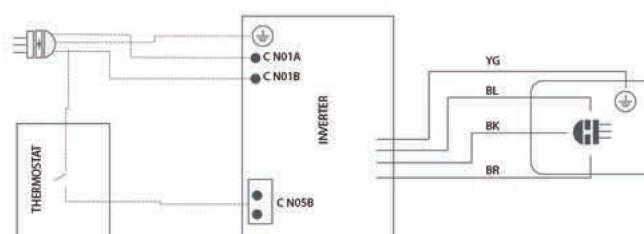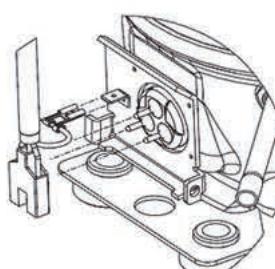

# WIRING DIAGRAMS



## CON07 - VNE (Drop-in)

- 1- Fence cover
- 2- OLP bracket
- 3- 3/4 OLP
- 4- Cord anchorage
- 5- Screw
- 6- Grommets
- 7- Compressor shell
- 8- Process tube
- 9- Discharge tube
- 10- Suction tube

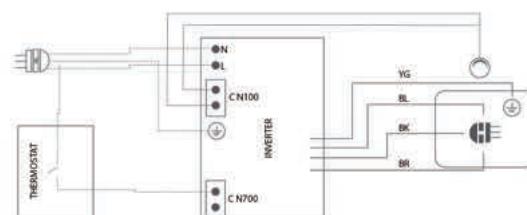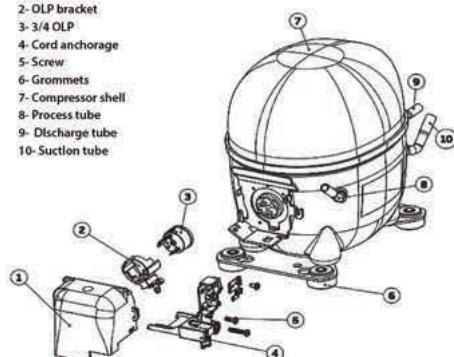



## CON08 - VNE (Frequency)

- 1- Fence cover
- 2- OLP bracket
- 3- 3/4 OLP
- 4- Cord anchorage
- 5- crew
- 6- Grommets
- 7- Compressor shell
- 8- Process tube
- 9- Discharge tube
- 10- Suction tube

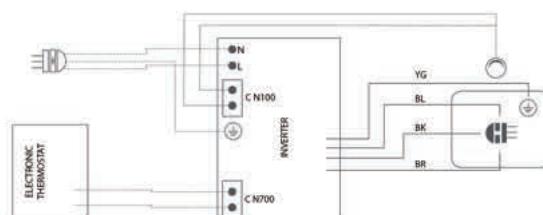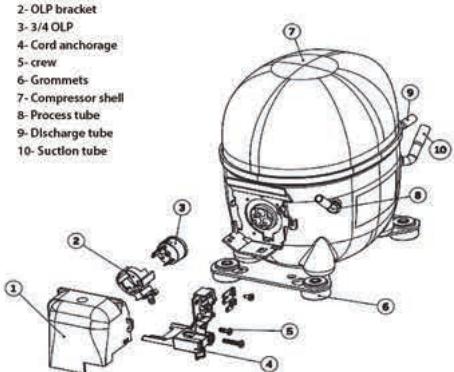


## CON09 - VNE (Serial)

- 1- Fence cover
- 2- OLP bracket
- 3- 3/4 OLP
- 4- Cord anchorage
- 5- Screw
- 6- Grommets
- 7- Compressor shell
- 8- Process tube
- 9- Discharge tube
- 10- Suction tube

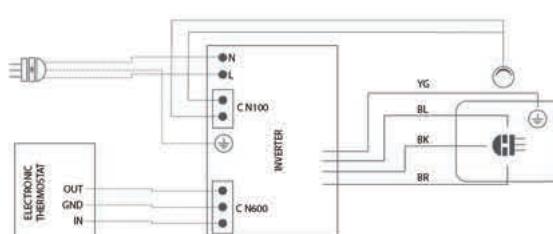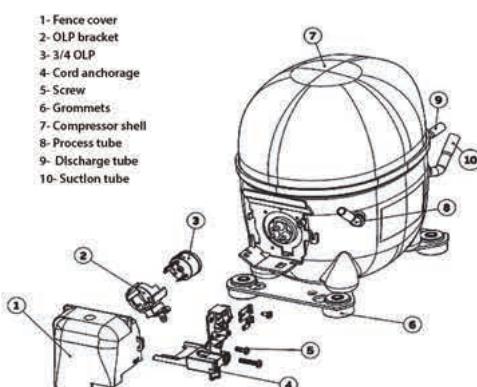


**embraco**  
**Nidec**

## CON10 - VEG (Drop-in)

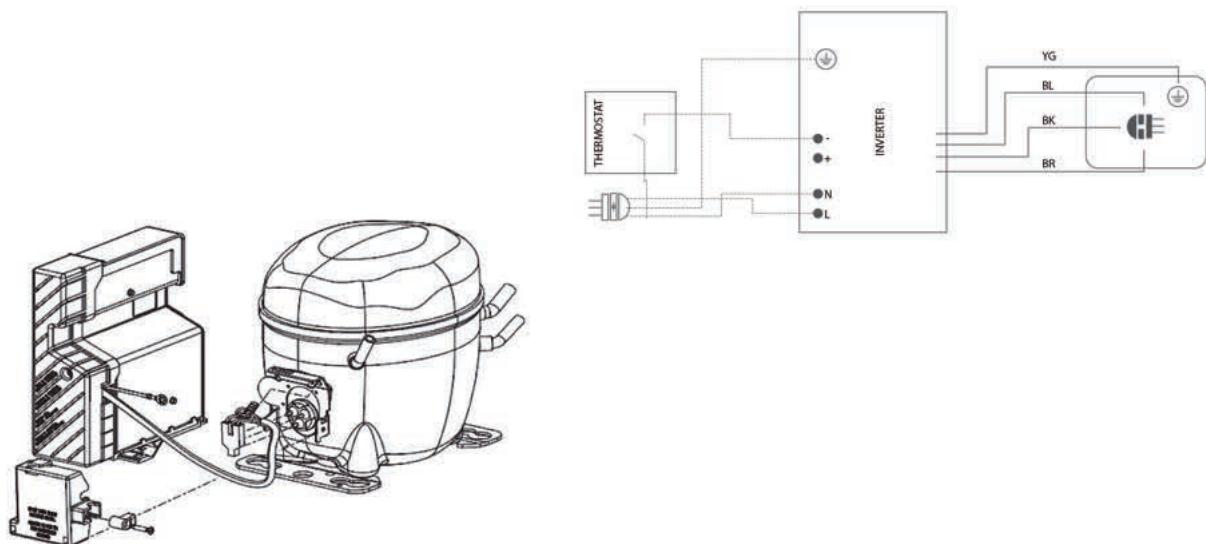

## CON11 - VEG (Frequency)

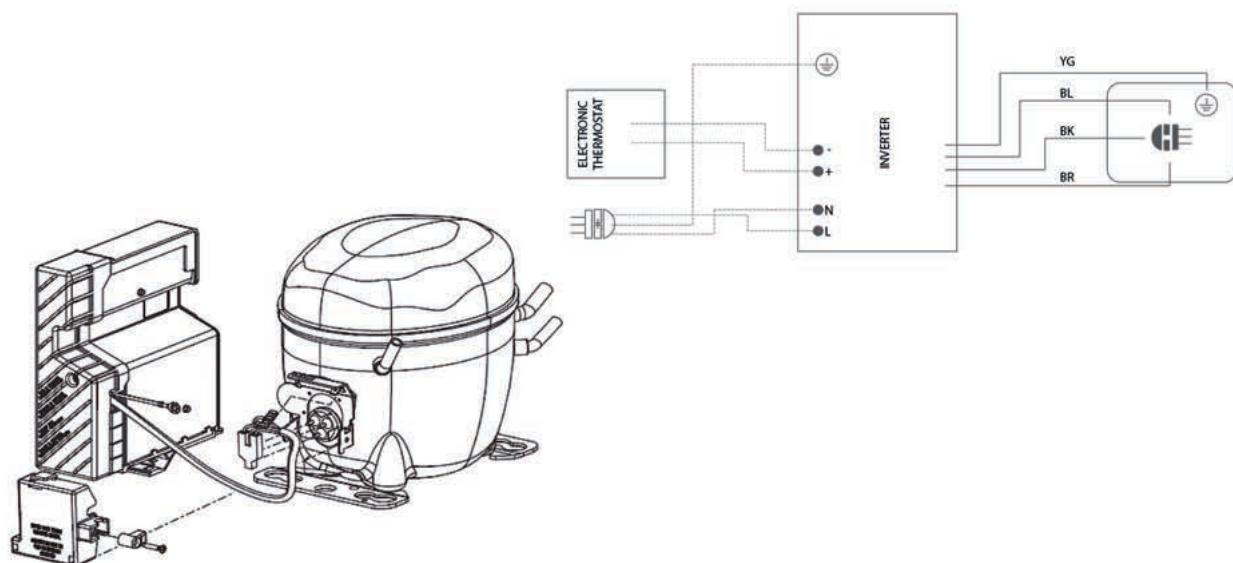

# RECOMMENDATIONS

## 1 - ELECTRICAL ACCESSORIES

Before removing the compressor plastic protection cover, check if the compressor is fully disconnected from the power source and if capacitors are applied.



Never operate on any electrical accessory with the compressor connected to the power grid. Working on an electrified compressor can cause severe damages to the technician's health, causing risks of electric shocks or getting burnt.



Start and/or run capacitors must be handled carefully, because, even when disconnected, they can cause electric shocks.

When you need to remove the capacitors, disconnect this components carefully paying attention to the exposed electric terminals. After disconnected, the capacitor must be discharged. Check if the capacitance ranges ( $\mu\text{F}$ ) printed on the label on the capacitors are in accordance with the compressor's technical data. The capacitor's voltage must be the same or higher than the specified value in the compressor's technical data. In case the capacitor or compressor's specification don't match, replace the capacitor.



The application of the wrong capacitor, not specified component, may cause overheating of these components. Overheating may cause fractures on the capacitor which can lead to the leakage of internal content burning the operator.

In the case of removing the electrical components from the compressor's hermetic terminal, first remove the overload protector and the start device (relay or PTC) applying longitudinal force on the terminal pins. Never apply transversal force on the pins of the hermetic terminal.




The incorrect removal of these accessories may damage the hermetic terminal on the compressor which can lead to the hermetic pins to be dislodged, causing refrigerant leakage. This situation becomes more critical in the case of flammable refrigerant utilization, since associated with an ignition source, creating a risk of and exposed flame with serious risks to the technician's physical integrity.

Cross check the code printed on the overload protector, relay or PTC with the compressor's technical data. In case they are different, replace these components for a compliant one. Universal accessories don't exist, you must always use components specified on the compressor's technical data.




The use of incorrect electrical components, (overload protector, starting device) can cause a short circuit in the region the hermetic terminal of the compressor, which can lead to the hermetic pins to be dislodged, causing refrigerant leakage. This situation becomes more critical in the case of flammable refrigerant utilization, since associated with an ignition source, creating a risk of and exposed flame with serious risks to the technician's physical integrity.

## 1 - ELECTRICAL INSTALLATION

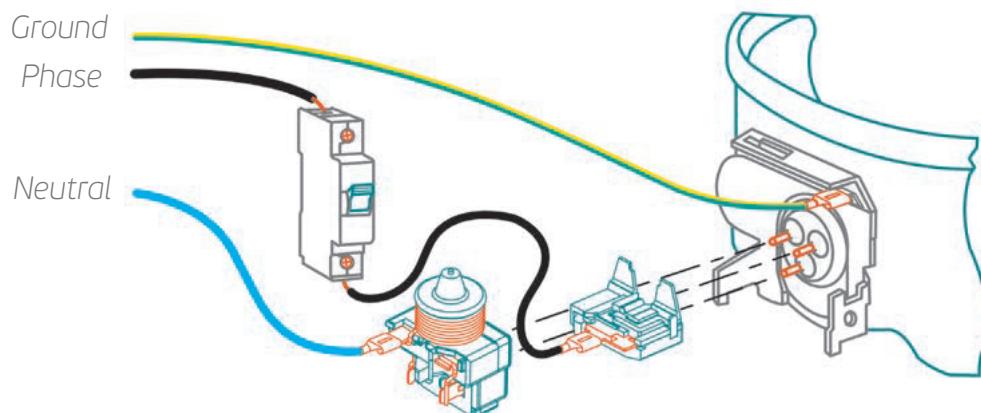

On single-phase installations, the phase wire must be protected by a circuit breaker and connected to the overload protector. The Neutral wire must be connected to the start device (Relay or PTC). The system must be grounded.

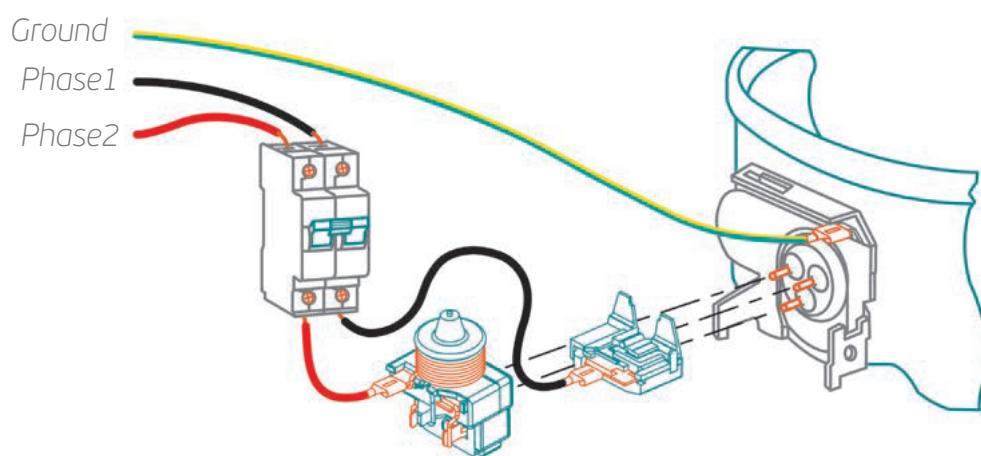

On two-phase installations, the use of a bipolar circuit breaker is mandatory, because in case of a short circuit, both phases will be protected. The system must be grounded.



When this bipolar starter isn't applied, the system is exposed to a short circuit in the region of the hermetic terminal of the compressor, which can lead to the hermetic pins to be dislodged, causing refrigerant leakage. This situation becomes more critical in the case of flammable refrigerant utilization, since associated with an ignition source, creating a risk of an exposed flame with serious risks to the technician's physical integrity.



The usage of a not grounded system can generate severe risk of an electric shock on the technician.

## 2 - COMPRESSOR

If the compressor's replacement is necessary, be aware to these points below:

I. Check if the compressor is disconnected from the power grid.



You must never handle any electrical accessory with the compressor connected to the power grid. This can prevent several health risks to the technicians, such as electric shocks or getting burnt.

II. You must never remove the compressor without first removing all the refrigerant inside the system. You can use refrigerant recovery. In the case of replacing compressors with flammable refrigerants, such as R290 or R600a, make sure to remove the whole charge from the system.



The presence of flammable fluid residues can expose the technician to risks.

III. You must always use a pipe cutter to disconnect the pipes from the compressor. Under no circumstances, use the flame torch to disconnect the compressor tubes.



The use of a torch to disconnect the compressor from the system operating with flammable refrigerant can cause fire and release of toxic vapors.

IV. In case of compressor failure and / or internal contamination of the system, clean the refrigeration circuit with a suitable solvent, following the technical guidelines of the solvent manufacturer.



Failure to comply with the solvent manufacturer's technical guidelines may expose the technician to risk of fire or intoxication.

V. Before turning the compressor on:

- Check if the voltage specified on the compressor label in accordance with the power grid and system electrical installation, following item 1.1.



The application of a compressor with a wrong voltage can cause a short circuit in the region the hermetic terminal of the compressor, which can lead to the hermetic pins to be dislodged, causing refrigerant leakage. This situation becomes more critical in the case of flammable refrigerant utilization, since associated with an ignition source, creating a risk of an exposed flame with serious risks to the technician's physical integrity.

- Check if the electrical protection plastic cover is properly inserted.



Failure to use or improperly fix the plastic cover on the electrical terminal may expose the technician to risk of electric shock and fire.

# COMPRESSORS LINE

*Light Catalogue 220-240V/50Hz*



**embraco**  
**Nidec**

[refrigerationclub.com](http://refrigerationclub.com)

